




DRAPE COMPOSITION 2 PENDANT

Installation Instructions








Congratulations on your purchase of a SkLO Drape Composition 2 Pendant. This product must be installed in accordance with the applicable codes by a person familiar with the construction and operation of the product and the hazards involved, preferably a licensed electrician. Use a maximum 7W bulb.

When unpacking individual items and parts of the light fixture, make sure to lay them out on a protective surface that will neither mar the delicate metal finishes nor scratch the glass. Gloves (nitrile) are provided and must be worn during installation to avoid fingerprints on the finish of the exposed metal parts.

Your SkLO fixture will arrive with the hand-blown glass elements packed separately from the light fixture itself.

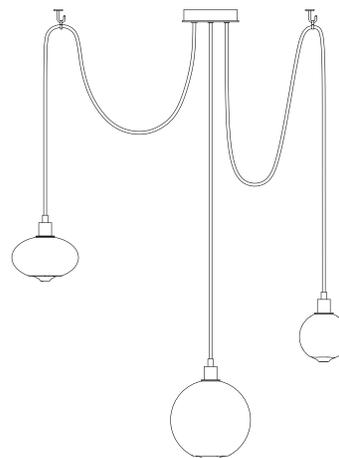

CONTENTS:

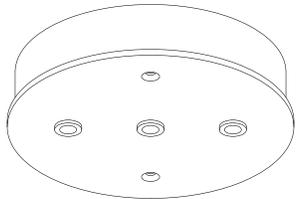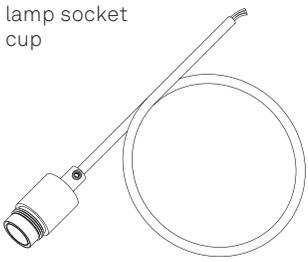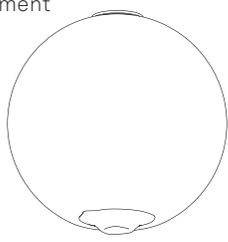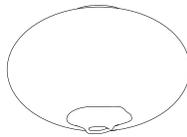
Canopy	Machine screw	Hook + "S" loop	Strain relief
			
1x	2x	2x	3x
Cord + lamp socket cup	Light bulb	Glass element	Glass element
			
3x	3x	1x	1x
Glass element	Wire connector		
			
1x	2x		



1. Uncoil and gently smooth the fabric-wrapped electrical cords of each pendant. Determine the desired length of each cord and trim each one, making sure to leave enough additional length to make the wiring connections within the canopy.
When trimming the fabric-wrapped electrical cords make sure to use electrical tape or other means to secure the fabric at the location of the cut, and then at the cut end to avoid splaying, fraying, or slack in the fabric (Figure 1).
 2. Slide the provided brass “S” loops onto the cord of the two pendants which will be the outside/swagged pendants (Figure 2).
 3. Pass the fabric-wrapped electrical cords of each individual pendant through the holes in the canopy (Figure 3). Slide plastic strain relief over end of cord and fix length of cord by tightening set screw – do not overtighten or damage the electrical cord and insulation (Figure 4).
 4. Carefully supporting the fixture, connect the exposed leads of the fixture to the leads in the electrical box according to the wiring diagram using the wire and wire connectors provided. Attach the ground (TE) wire from light fixture to the dedicated place in the recessed electrical box, phase 1 (L1) + phase 1 (L1) from light fixture, neutral (N) + neutral (N) from light fixture (Figure 5).
 5. This pendant requires an electrical box with available holes at 3 1/2” on center spacing. If a box with differently spaced threaded holes is present, additional parts may be required to install the fixture properly, such as a universal cross bar (not supplied).
 6. Determine the composition for your Drape Composition 2, and install the brass hooks for the swagged pendants into the ceiling at the desired locations. Use anchors (not provided) appropriate to the ceiling material. Carefully slide the brass loop along the fabric-wrapped electrical cord taking great care not to tear or mar the fabric. Use needlenose pliers with taped jaws to slightly crimp the loop to fix the loop slightly into place. Hang the cord on the hook by slipping the open loop over the end of the hook (Figure 7).
 7. Install the supplied LED light bulbs (7W Max) into the sockets. This fixture uses G9 sockets and light bulbs. The G9 is a bi-pin socket. Light bulbs are to be inserted and removed by pushing the bulb straight into the socket, and by pulling it straight out. The bulb, when inserted, should have a tight fit. Do not force the bulb. If there is resistance, check to make sure nothing inside the socket is bent or obstructing the bulb. Always turn off the power to the fixture when changing the bulb(s) (Figure 8).
 8. Carefully thread a piece of glass onto each socket. Do not overtighten. Install the large diameter glass sphere onto the central pendant, and the smaller diameter glass sphere and the ovoid onto the outer swagged pendants.
- Install the canopy by fastening the two supplied 8/32 thread brass machine screws directly into the appropriate holes in the electrical box through the holes and guides provided as part of the canopy, making sure that the canopy sits flat and flush against finish surface (Figure 6). Take great care when installing screws so that tools do not slip and scratch the canopy finish, nor damage the exposed screw head slots.




1.

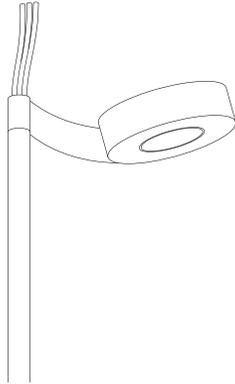


2.



3.

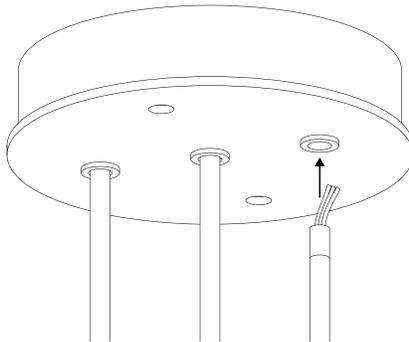


4.

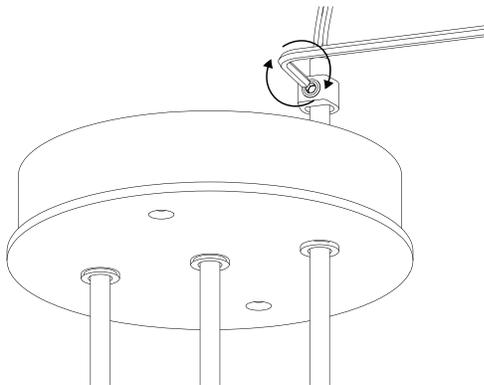





5.

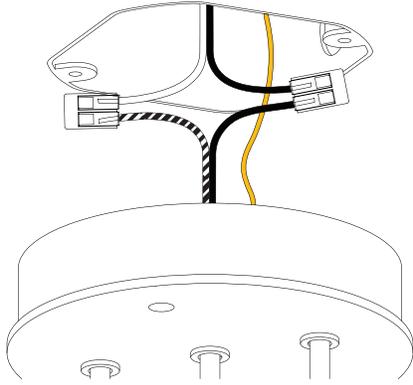


6.

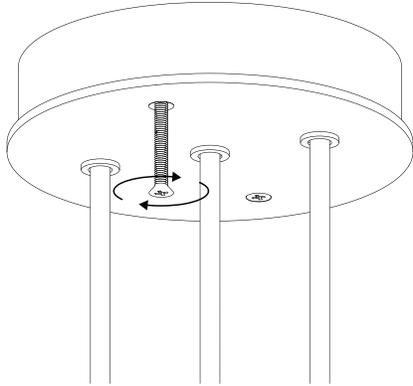


7.

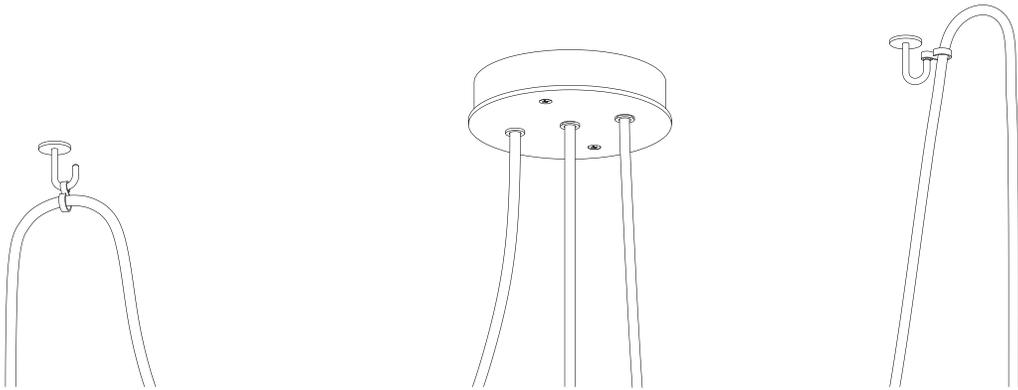

8.

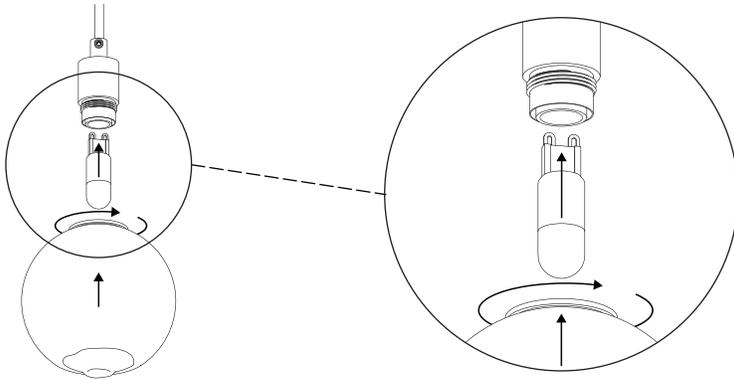

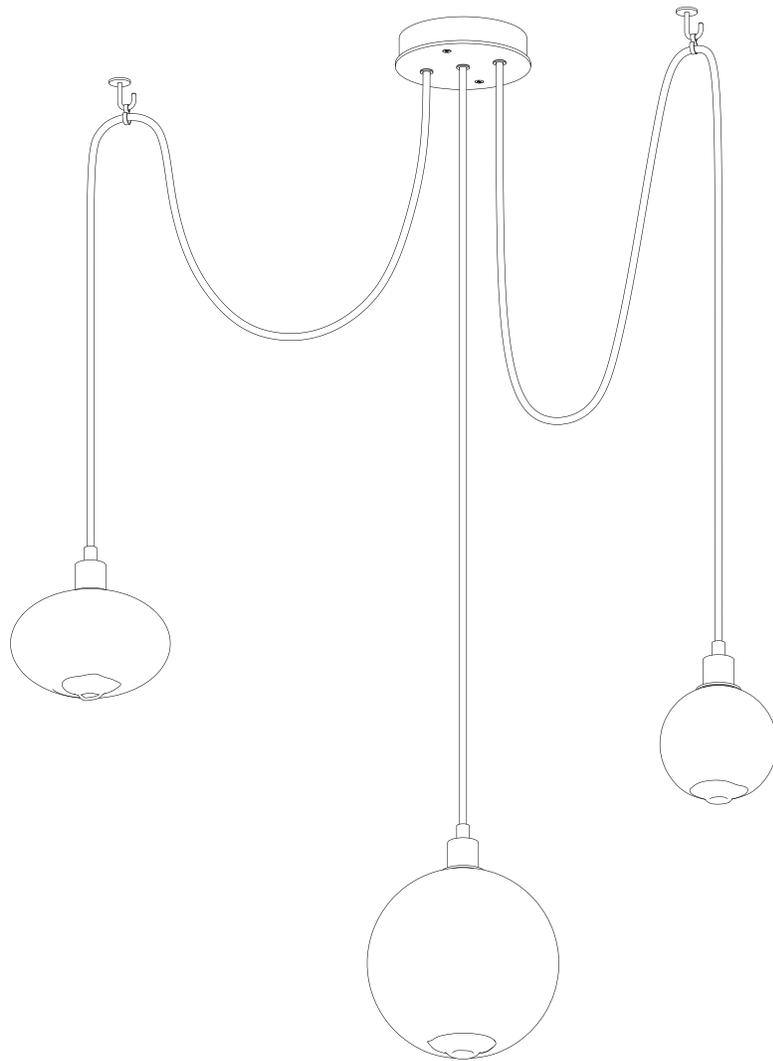

SkLO

sklo.com

SkLO US 115 WEST NORTH STREET HEALDSBURG CALIFORNIA 95448 USA +1.707.385.2101 us@sklo.com
SkLO EU VÁŽNÍ 488 500 03 HRADEC KRÁLOVÉ CZECH REPUBLIC +420.495.542.071 eu@sklo.com