




# TWIN 2.0 SCONCE/CEILING

## Installation Instructions

*Congratulations on your purchase of a SkLO Twin 2.0 Sconce/Ceiling. This product must be installed in accordance with the applicable codes by a person familiar with the construction and operation of the product and the hazards involved, preferably a licensed electrician. Use a maximum 7W bulb.*


**When unpacking individual items and parts of the light fixture, make sure to lay them out on a protective surface that will neither mar the delicate metal finishes nor scratch the glass. Gloves (nitrile) are provided and must be worn during installation to avoid fingerprints on the finish of the exposed metal parts.**

Your SkLO fixture will arrive with the hand blown glass elements packed separately from the light fixture itself.

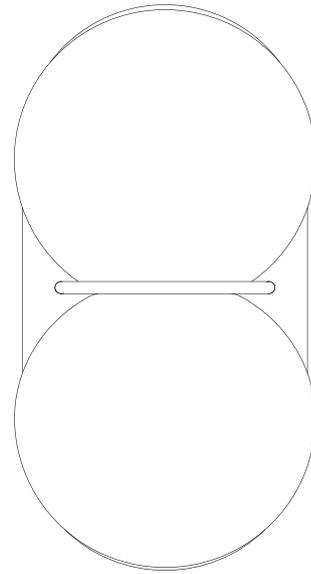


## CONTENTS:

Canopy+  
mounting plate

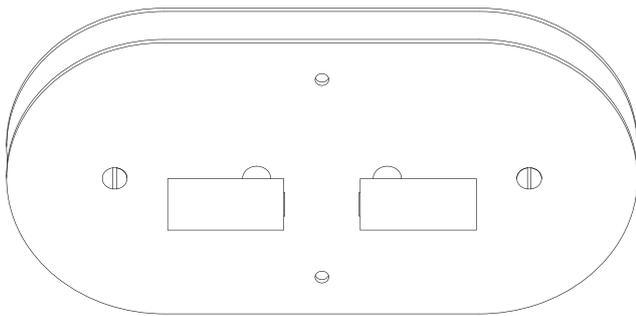

Glass  
diffuser

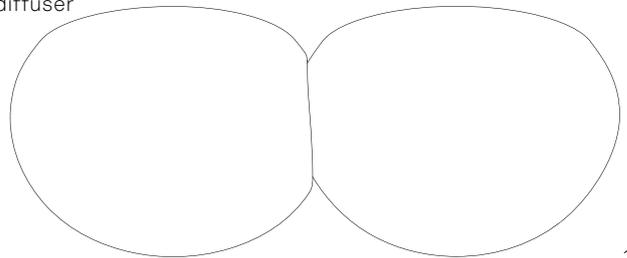


1x

Light  
bulb



1x


Crossbar  
+nuts

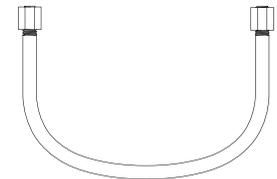

2x

1x

Wire  
connector

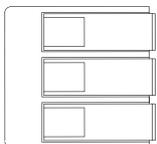


2x




1. The mounting plate will arrive fastened to the canopy. Separate the mounting plate from the canopy by carefully removing the two machine screws and set these aside for use during final installation (Figure 1).
2. Determine the final desired position and orientation of the fixture. Position the mounting plate over the recessed electrical box in a way that the central opening in the plate and the box are aligned. Install the mounting plate directly to the wall/ceiling using fasteners/anchors (not provided) that are appropriate to the wall/ceiling material. Make sure that the mounting plate sits flush against the finish surface (Figure 2).
3. Carefully supporting the canopy, connect the exposed leads from the fixture to the leads in the electrical box according to the wiring diagram using the wire and wire connectors provided. Attach the ground (TE) wire from light fixture to the dedicated place in the recessed electrical box, phase 1 (L1) + phase 1 (L1) from light fixture, neutral (N) + neutral (N) from light fixture. Fasten the canopy to the plate by screwing the two provided screws through the countersunk holes in the canopy into the two threaded stand-offs on the mounting plate (Figure 3). Make sure that no electrical cables or connections are exposed where the canopy meets the plate. Take great care when installing screws so that tools do not slip and scratch the canopy finish, or damage the exposed screw head slots.
4. Install the supplied LED light bulbs (7W Max) into the sockets (Figure 4).
5. Unwrap and lay out the glass diffuser. Carefully fit the glass diffuser over light bulbs so that it sits flush against the brass canopy surface. Secure the glass in place by inserting the crossbar into holes on each side of the canopy and securing the crossbar with provided nuts (Figure 5).



1.

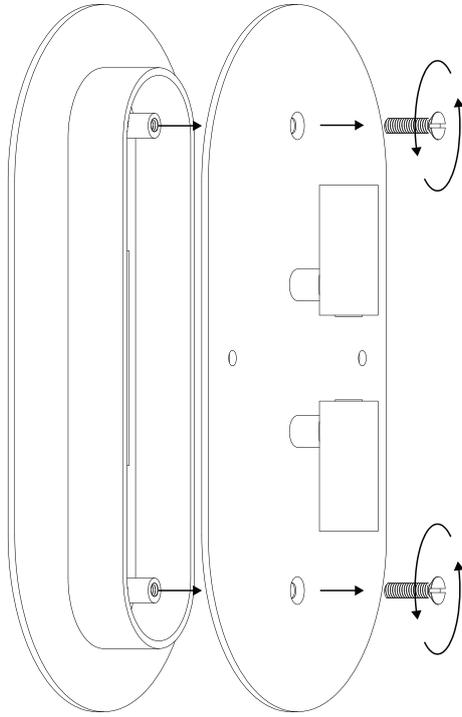


2.

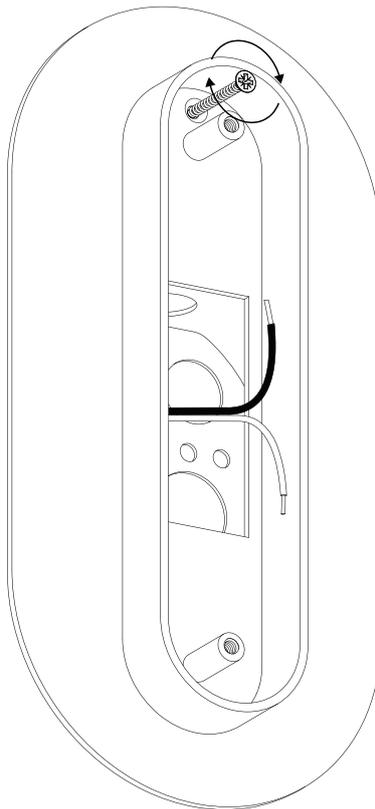




3.

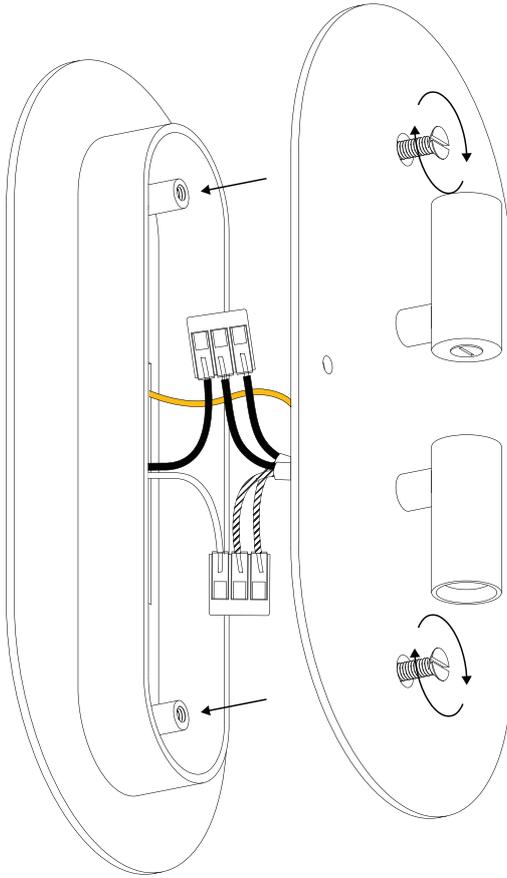



4.

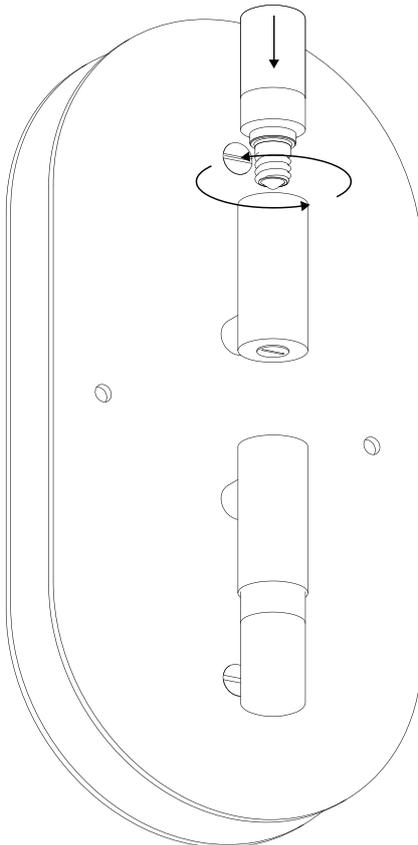



5.

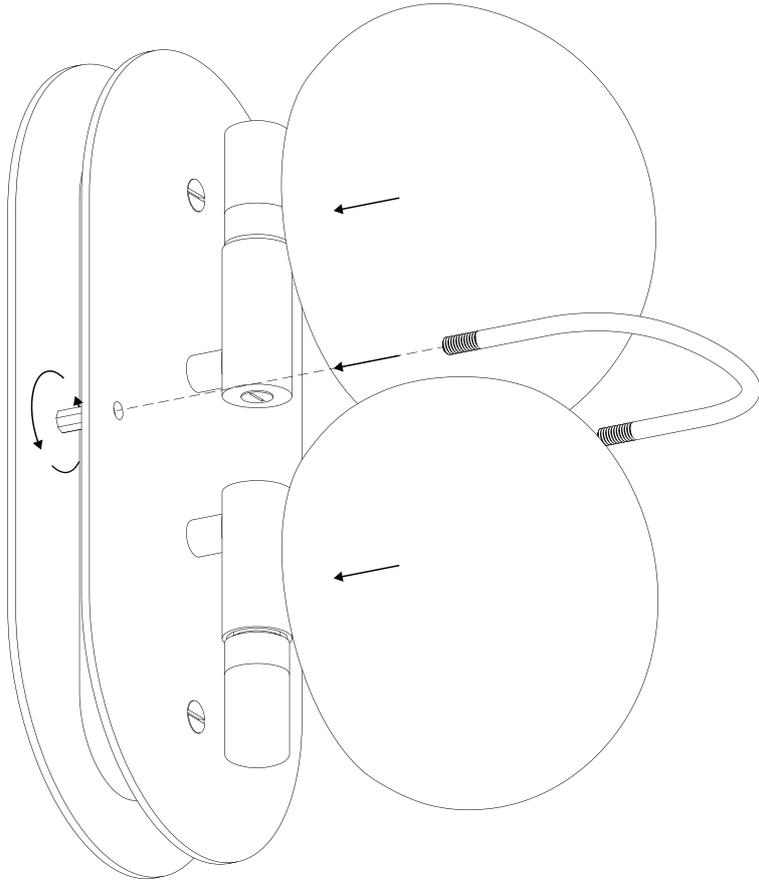

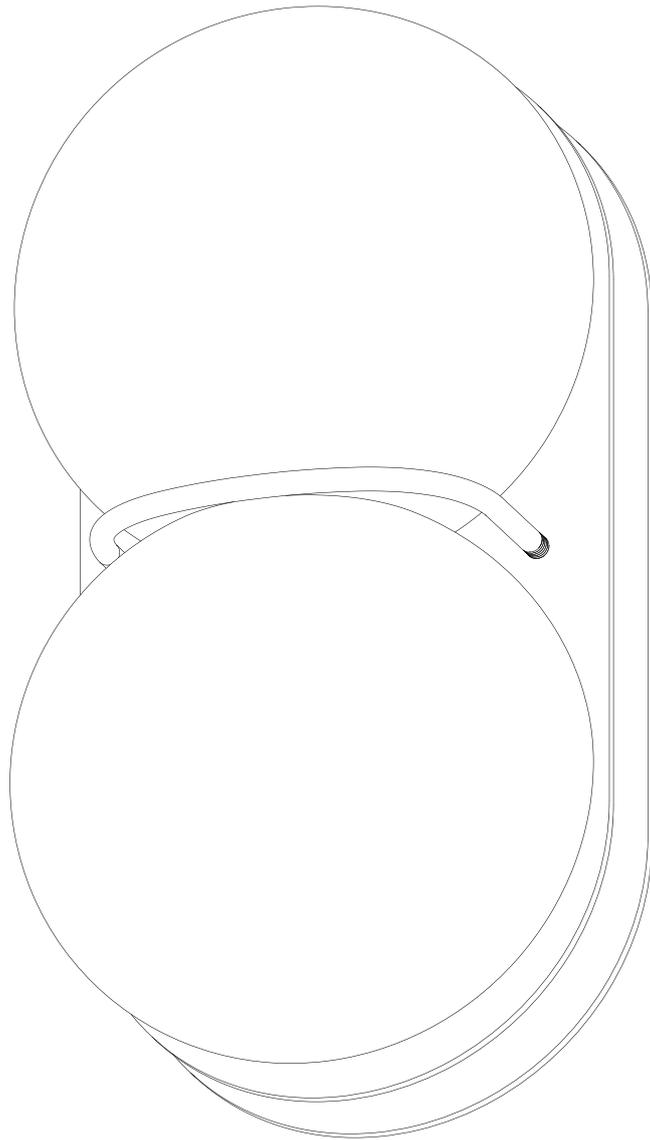

**SkLO**

sklo.com

SkLO US 115 WEST NORTH STREET HEALDSBURG CALIFORNIA 95448 USA +1.707.385.2101 us@sklo.com  
SkLO EU VÁŽNÍ 488 500 03 HRADEC KRÁLOVÉ CZECH REPUBLIC +420.495.542.071 eu@sklo.com