



FOLD PENDANT

Installation Instructions




Congratulations on your purchase of a SkLO Fold pendant. This product must be installed in accordance with the applicable codes by a person familiar with the construction and operation of the product and the hazards involved, preferably a licensed electrician.

When unpacking individual items and parts of the light fixture, make sure to lay them out on a protective surface that will neither mar the delicate metal finishes nor scratch the glass. Gloves (nitrile) are provided and must be worn during installation to avoid fingerprints on the finish of the exposed metal parts.

Your SkLO fixture will arrive with the hand blown glass elements packed separately from the light fixture itself.



CONTENTS:

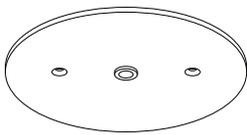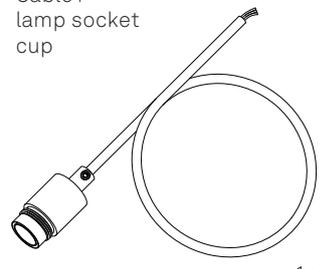
| | | | | |
|---|---|--|----|--|
| Canopy | Machine screw | Cable+ lamp socket cup | | |
|  |  |  | | |
| Strain relief | 1x Light bulb | 2x Glass diffuser | 1x | |
|  |  |  | | |
| | 1x | 1x | 1x | |
| | | | | |
| | | | | |




1. Determine the length of exposed cord required. Then, leaving enough extra length to make the electrical connections in the canopy, trim any excess length of electrical cord - when trimming the fabric-wrapped electrical cords make sure to use electrical tape or other means to secure the fabric at the location of the cut, and again at the cut end to avoid splaying or fraying or slack in the fabric. (Figure 1)
2. Pass the fabric-wrapped electrical cord through the hole in the canopy. Slide plastic strain relief over end of cord and fix length of cord by tightening set screw - do not overtighten or damage the electrical cord and insulation. (Figure 2)
3. Carefully supporting the fixture, connect the exposed leads of the fixture to the leads in the electrical box according to the wiring diagram (Figure 3) using the wire connectors provided. Attach the grounding wire to the dedicated place in the recessed electrical box.
4. This pendant requires an electrical box with available holes at 3 1/2" on center spacing. If a box with differently spaced threaded holes is present, additional parts may be required to install the fixture properly, such as a universal cross bar (not supplied). Install the canopy by fastening the two supplied 8/32 thread brass machine screws directly into the appropriate holes in the electrical box through the holes in the canopy, making sure that canopy sits flat and flush against finish surface. (Figure 4)
5. Install a light bulb in the socket (provided - 7W Max). Unwrap the glass diffuser. Carefully thread a glass diffuser onto the socket (Figure 5). Thread the glass diffuser on just until it is visually tight - do not overtighten.




1.

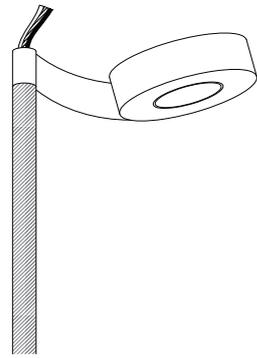


2.

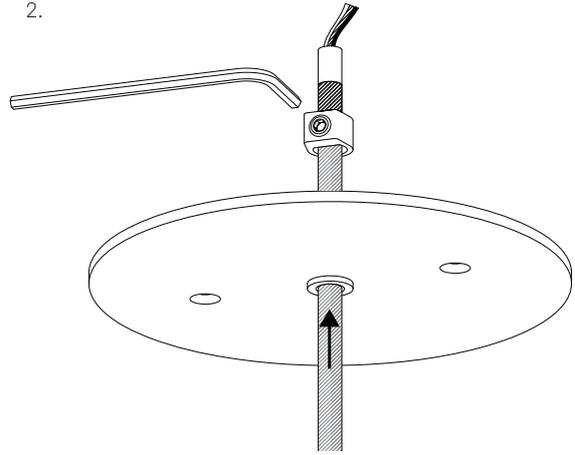


3.

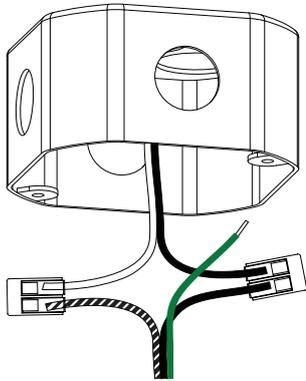


4.

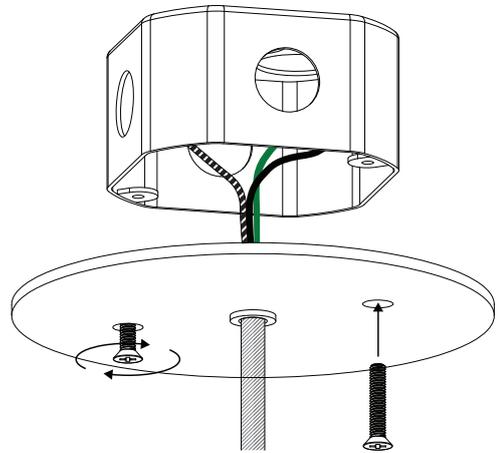

5.

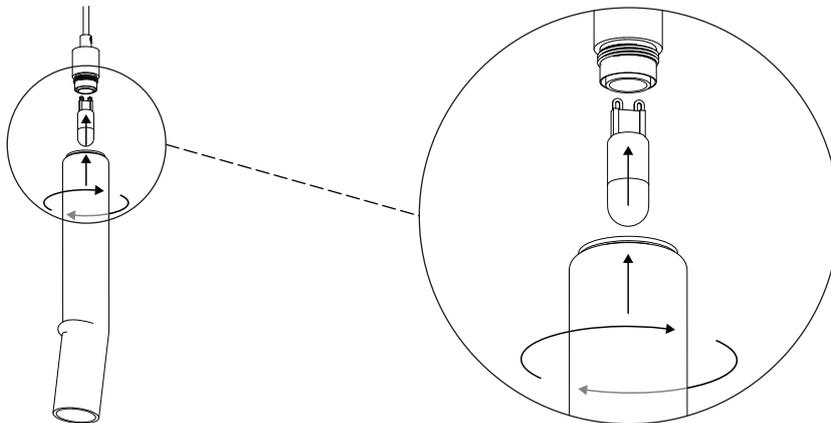

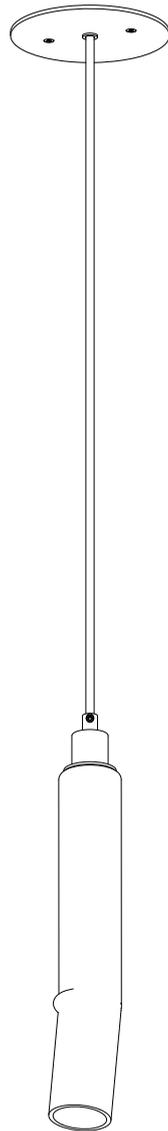

SkLO

sklo.com

SkLO US 115 WEST NORTH STREET HEALDSBURG CALIFORNIA 95448 USA +1.707.385.2101 us@sklo.com
SkLO EU VÁŽNÍ 488 500 03 HRADEC KRÁLOVÉ CZECH REPUBLIC +420.495.542.071 eu@sklo.com