


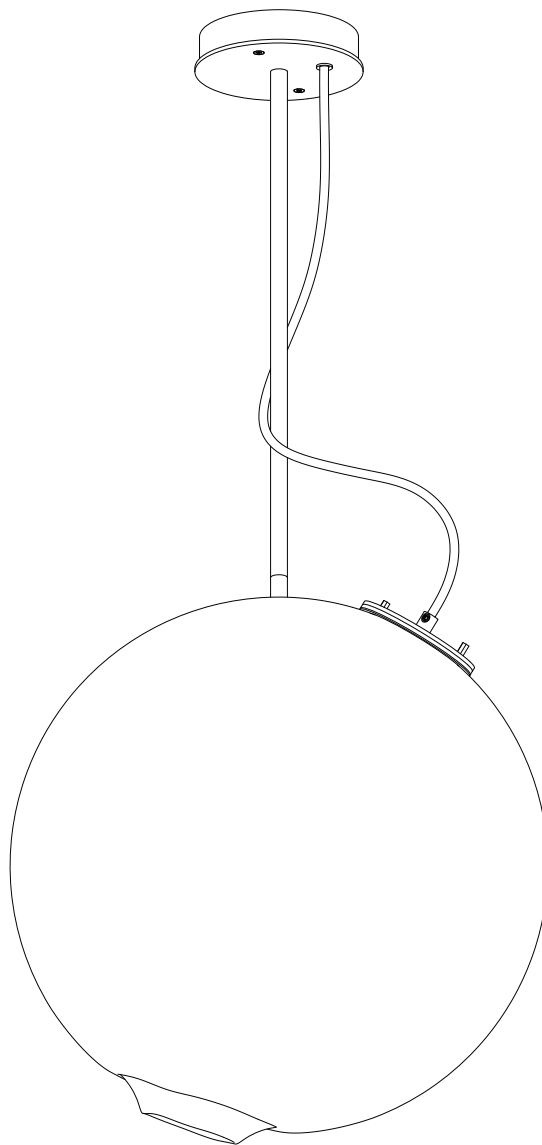

FLOAT 2.0 PENDANT

Installation Instructions



SkLO

sklo.com


SkLO US 115 WEST NORTH STREET HEALDSBURG CALIFORNIA 95448 USA +1.707.385.2101 us@sklo.com
SkLO EU BRATŘÍ ŠTEFANŮ 902/71 500 03 HRADEC KRÁLOVÉ CZECH REPUBLIC +420.495.542.071 eu@sklo.com




Congratulations on your purchase of a SkLO Float 2.0 Pendant. This product must be installed in accordance with the applicable codes by a person familiar with the construction and operation of the product and the hazards involved, preferably a licensed electrician. Use a maximum 60W bulb.


When unpacking individual items and parts of the light fixture, make sure to lay them out on a protective surface that will neither mar the delicate metal finishes nor scratch the glass. Gloves (nitrile) are provided and must be worn during installation to avoid fingerprints on the finish of the exposed metal parts.

Your SkLO fixture will arrive with the hand-blown glass elements packed separately from the light fixture itself.

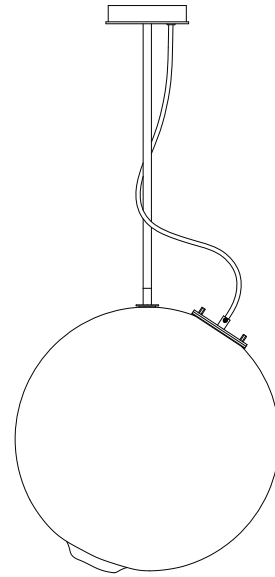

CONTENTS:

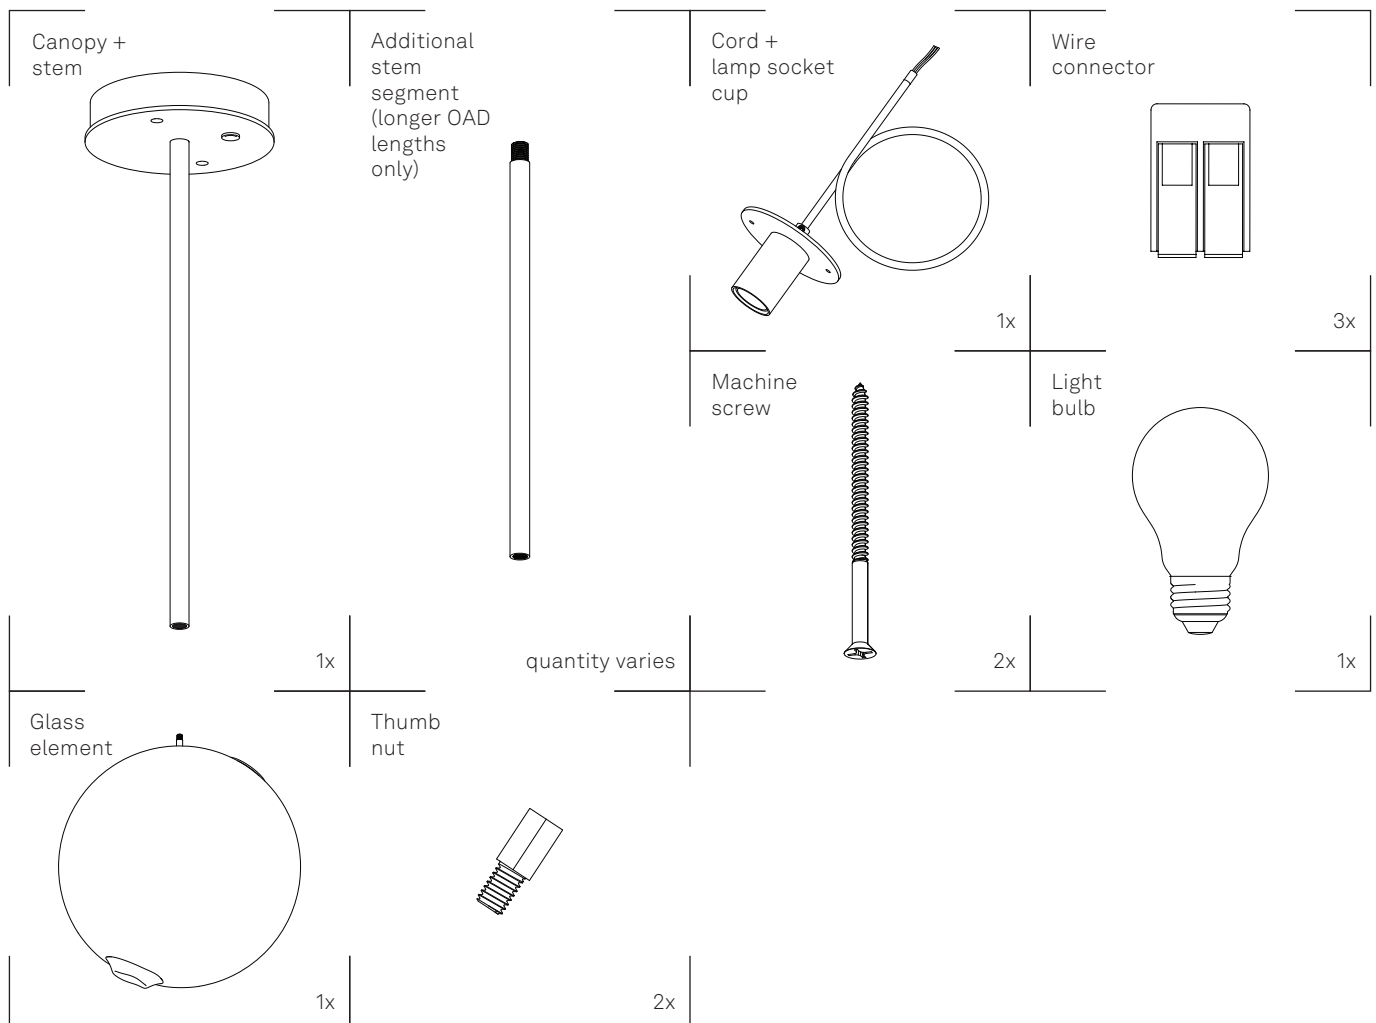



1. Attach the female/internally threaded stem by threading the open end of the stem onto the exposed threaded nipple on the top of the glass element (Figure 1).

Note: The electrical socket will come separate from the glass. The fabric-wrapped electrical cord will be coiled and the brass socket wrapped in protective packaging – we recommend leaving the electrical packaged during installation.


For lights with longer OAD lengths, the stem will be in multiple parts. Uncoil the electrical wiring and carefully pass the wires through each stem as you fasten them together. To connect the stems, first, attach one of the lengths of the stem to the fixture by threading the open female/internally threaded end of the stem onto the exposed threaded nipple on the top of the glass sphere of the fixture (Figure 1). Then, attach the remaining stem lengths by threading the open end of each stem onto the exposed nipple of the other (Figure 2).

2. Pass the fabric-wrapped electrical cord through the strain relief in the canopy (Figure 3) and fix length of cord by tightening set screw – do not overtighten or damage the electrical cord and insulation (Figure 4).
3. Connect the exposed leads of the fixture to the exposed leads on the ceiling following the wiring diagram and using the provided wire connectors. Attach the ground (TE) wires to ground (TE) wires of the light fixture, phase 1 (L1) to phase 1 (L1) of the light fixture, neutral (N) to neutral (N) of the light fixture (Figure 5). Please note the number and type of wire connectors may vary.


4. The canopy installs directly to the ceiling. Anchors or other accessories appropriate for both the provided fasteners and the ceiling material/structure and weight of the fixture may be required (not provided). Align the canopy and carefully supported fixture all the way flush to the ceiling taking care that no electrical cables or connections are exposed where canopy meets the ceiling. Fasten the canopy to the ceiling by screwing the two provided screws through the countersunk holes provided in the canopy (Figure 6). Take great care when installing screws so that tools do not slip and scratch the canopy finish, nor damage the exposed screw head slots.
5. Remove the protective packaging from around the brass socket. SkLO recommends loosely wrapping the cord once or twice around the stem for best visual composition. Install the supplied LED light bulb (60W Max) into the socket (Figure 7).
6. The glass sphere has a large opening with a permanently fixed brass assembly through it. On the outside of the brass assembly there are two small threaded studs, each with a brass thumb nut threaded onto it – remove the two thumb nuts. With the bulb installed in the socket, slide the bulb and socket carefully into the brass assembly in the glass such that the two threaded studs on the assembly pass through the two holes in the disc on the back of the socket. (To change the light bulb, simply reverse this procedure). Thread the two brass thumb nuts onto the threaded studs. Do not overtighten (Figure 8).




1.

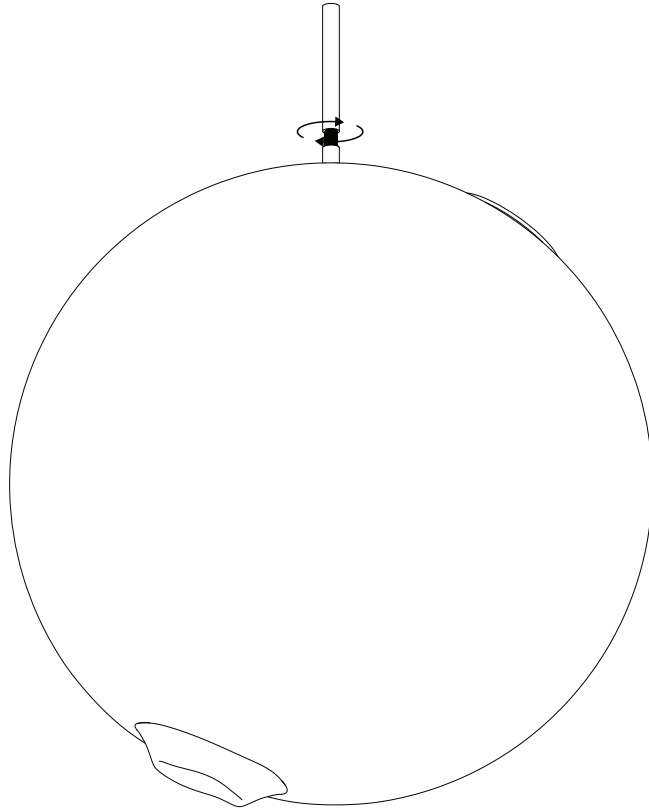

2.

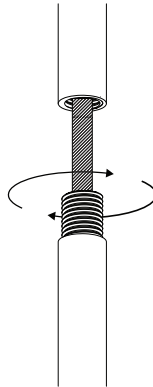


3.

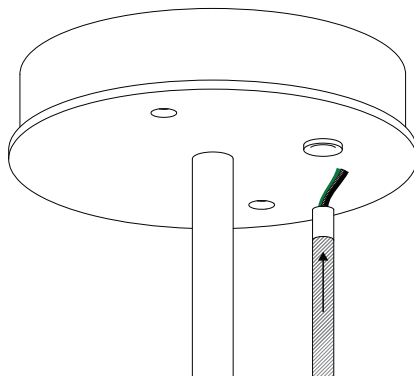





4.

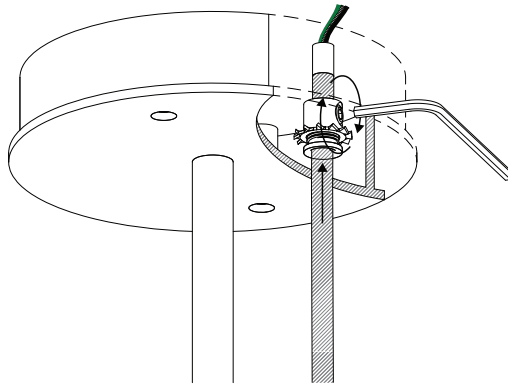


5.

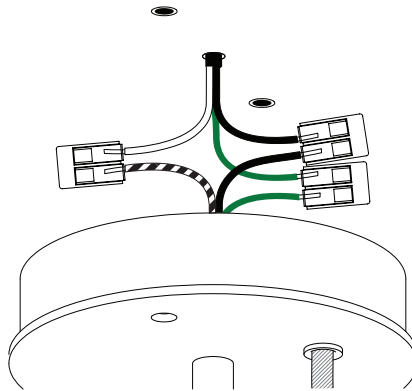

6.

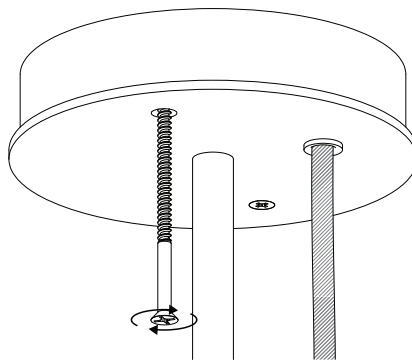

7.

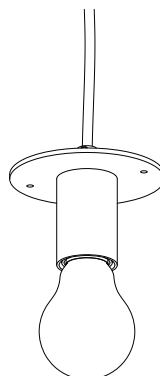



8.

