



BEAD CHAIN 11 WALLPIECE

Installation Instructions



SkLO

sklo.com

SkLO US 115 WEST NORTH STREET HEALDSBURG CALIFORNIA 95448 USA +1.707.385.2101 us@sklo.com
SkLO EU VÁŽNÍ 488 500 03 HRADEC KRÁLOVÉ CZECH REPUBLIC +420.495.542.071 eu@sklo.com




BEAD CHAIN 11 WALLPIECE

Installation Instructions









Congratulations on your purchase of a SkLO Bead Chain 11 Wallpiece.

When unpacking individual items and parts of the light fixture, make sure to lay them out on a protective surface that will neither mar the delicate metal finishes nor scratch the glass. Gloves (nitrile) are provided and must be worn during installation to avoid fingerprints on the finish of the exposed metal parts.

Your SkLO object will arrive with the hand-blown glass elements packed separately from the metal parts.

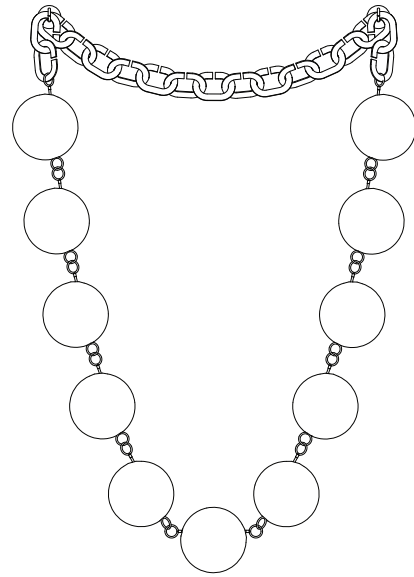


CONTENTS:

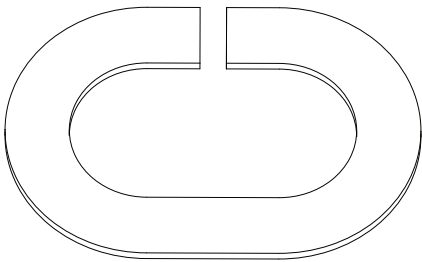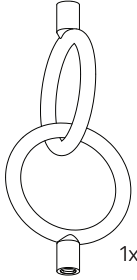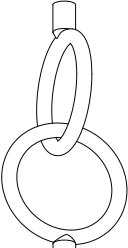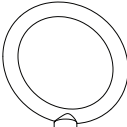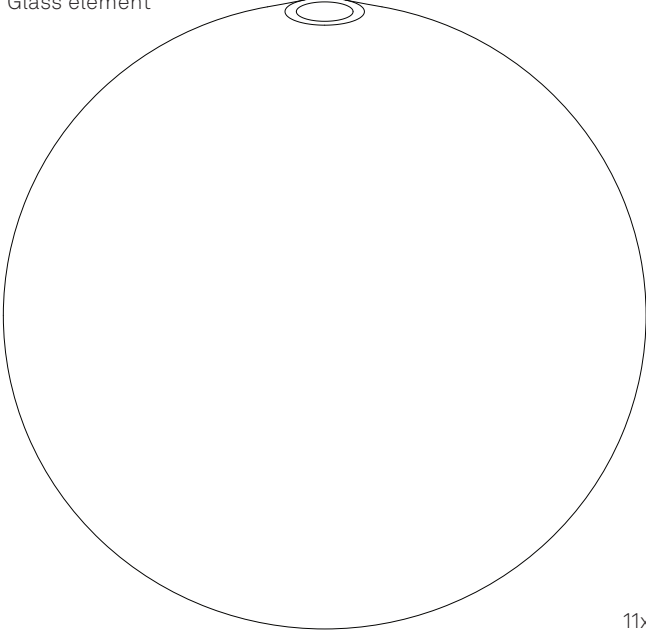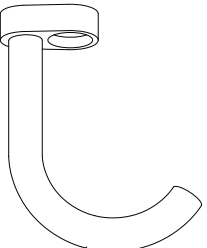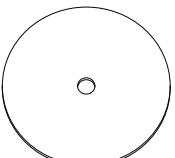Chain link				
	Screw	2 loops	2-loop stem	1-loop stem
				
	17x	2x	1x	
Glass element	Hook			
				
	Plate			
				
	11x	2x	9x	2x



1. Determine the desired composition and overall dimensions for your Bead Chain 11 Wallpiece. The SkLO recommended composition is shown in Figure 1. Note the overall dimensions of the recommended composition.
2. The distance between the two wall hooks determines the composition and overall dimensions. For the SkLO recommended composition, the two wall hooks should be approximately 37"/950mm apart center-to-center (Figure 2). Small variations from the SkLO recommended composition are possible by changing the distance between the hooks. Mark the location of the two hooks. Use a level to achieve the best results.
3. Install the two hooks with appropriate hardware for the wall and weight of the wallpiece (Figure 3).
4. Connect the 17 chain links together to form one chain. Take great care when connecting the chain links so that they do not scratch (Figure 4).
5. Hang the chain on the wall hooks. For the SkLO recommended composition, hang the chain so that two links hang down from each hook (Figure 5).
6. Attach the two one-loop stems, one on each end of the chain (Figure 6).
7. Working from both sides, start adding the glass elements. Carefully, one at a time, slide the glass elements up over the stems and thread on the two-loop stems so that the glass can rest on the loops (Figure 7).
8. Add five glass elements to each side. Finish this step by threading on the two-loop stem to one end and the two loops with no stem to the other end (Figure 8).
9. Finally, add the eleventh piece of glass and connect the two ends by threading the two loops onto the two-loop stem (Figure 9).


1.

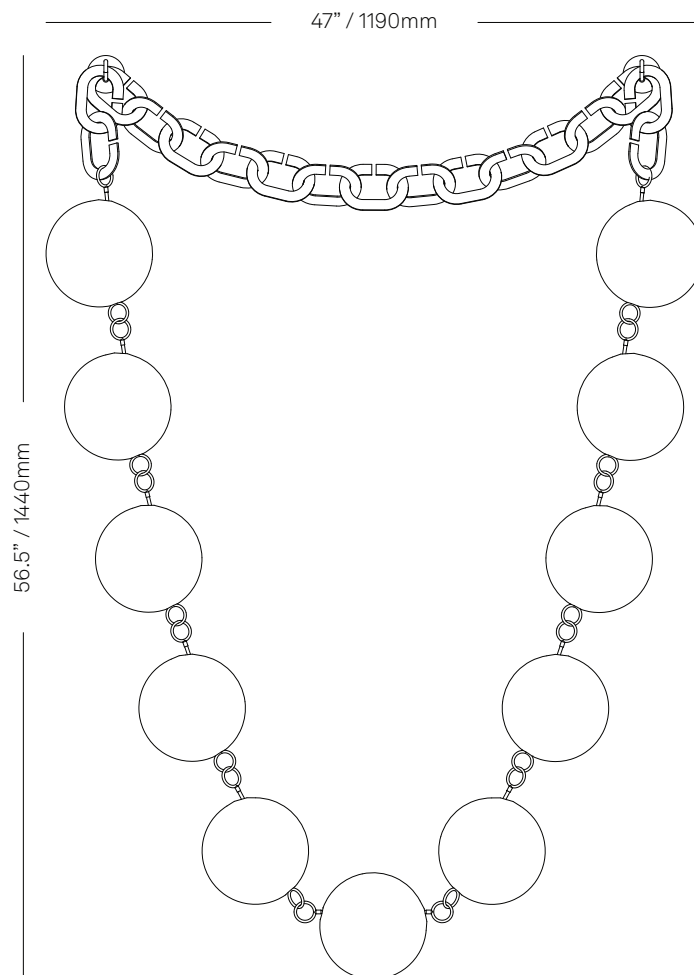




2.


distance between hooks is 37"/950mm for SkLO recommended composition




3.

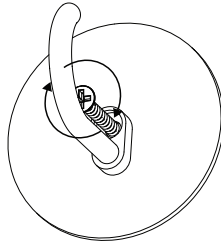

4.


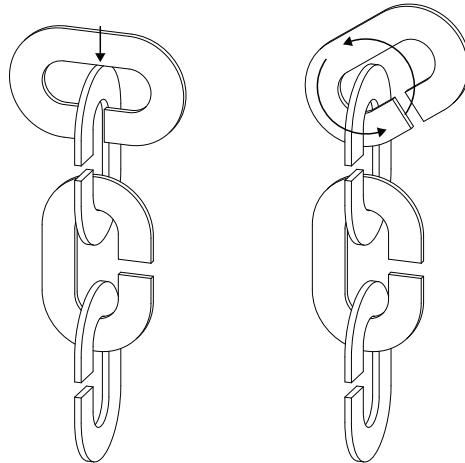


5.

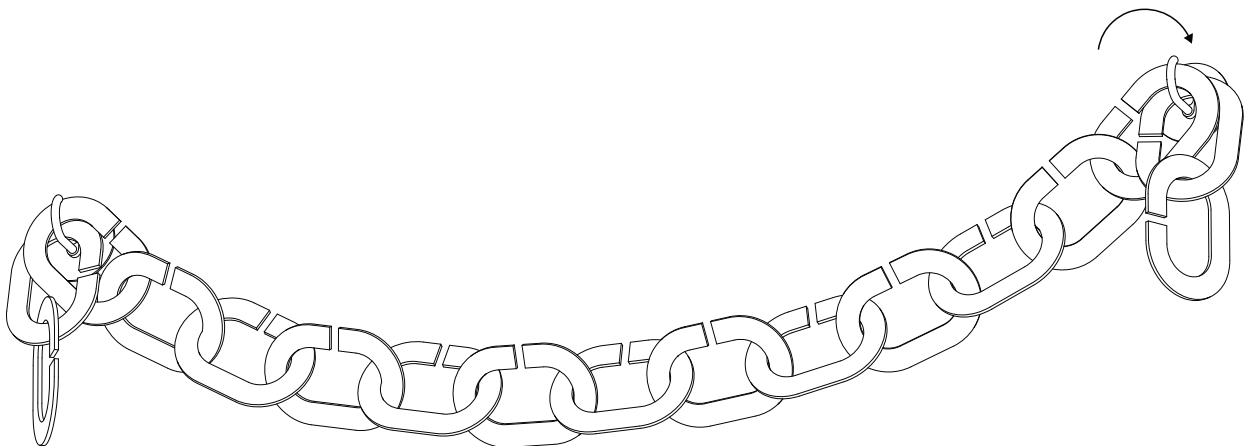






6.

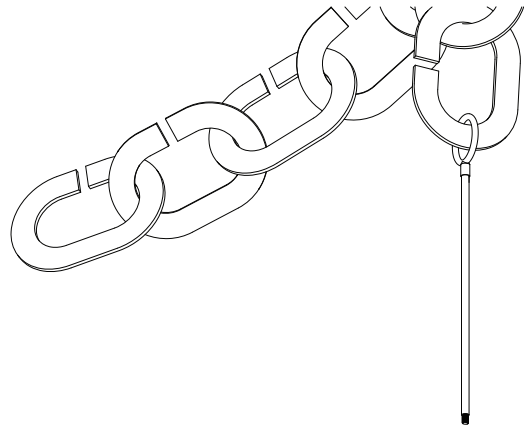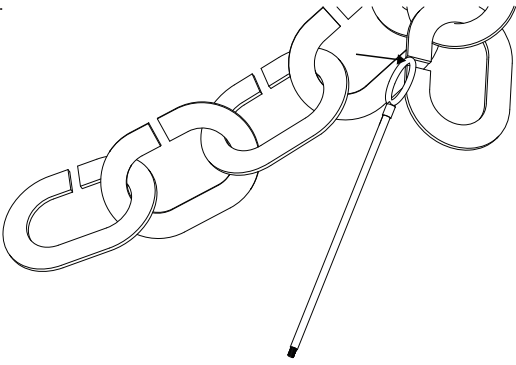

7.

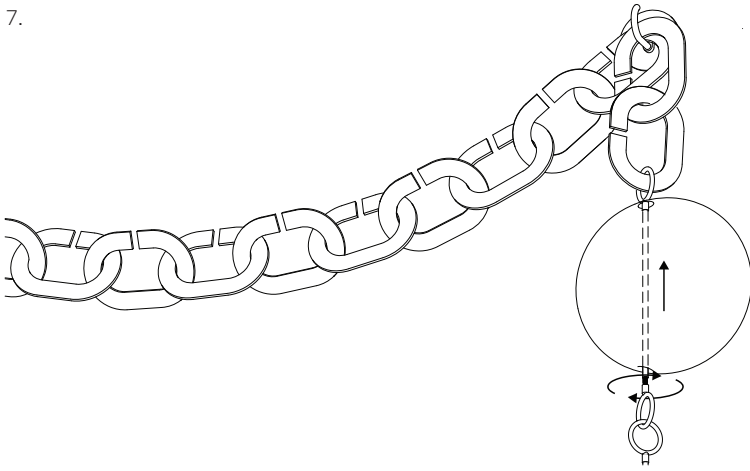

8.

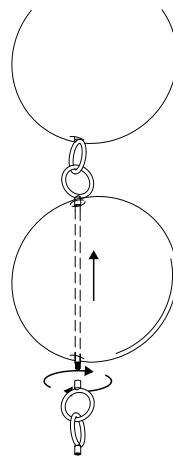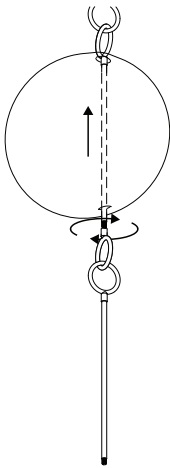

9.

