


DRAPE ARM 8 CHANDELIER

Installation Instructions

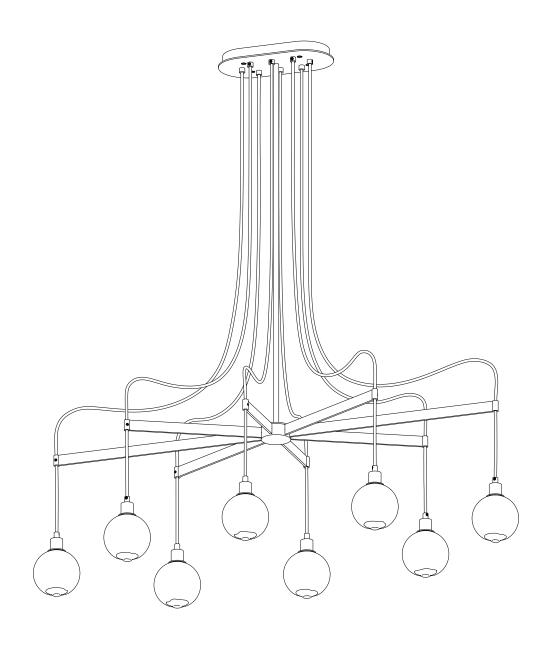




DRAPE ARM 8 CHANDELIER


Congratulations on your purchase of a SkLO Drape Arm 8 Chandelier. This product must be installed in accordance with the applicable codes by a person familiar with the construction and operation of the product and the hazards involved, preferably a licensed electrician. Use a maximum 7W bulb.

When unpacking individual items and parts of the light fixture, make sure to lay them out on a protective surface that will neither mar the delicate metal finishes nor scratch the glass. Gloves (nitrile) are provided and must be worn during installation to avoid fingerprints on the finish of the exposed metal parts.

Your SkLO fixture will arrive with the hand-blown glass elements packed separately from the light fixture itself.

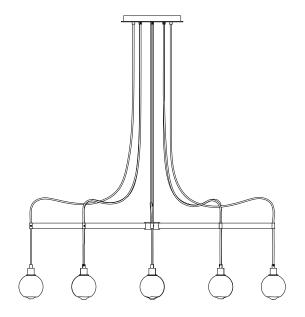

CONTENTS:

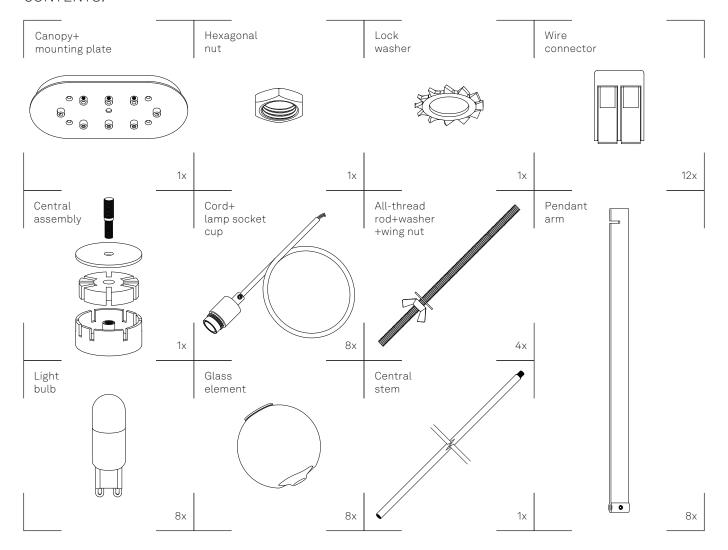




- Attach the arms. Slide the slot at the end of the arm into the slot on the central assembly. The spacer part will help you to position the arm in the correct direction. Screw the top part of the central assembly to fix/lock the arm in its position (Figure 1). Follow the diagram (Figure 11) to attach arms in the correct order.
- 2. Attach the central stem to the central assembly by threading it on the exposed male threaded nipple on the top of the assembly (Figure 2).
- 3. Use the supplied lock washer and nut to secure the canopy to the exposed threaded nipple on the top of the stem (Figure 3).
- 4. The mounting plate will arrive fastened to the canopy. Separate the mounting plate from the canopy by carefully removing the four machine screws and set these aside for use during final installation.
 - Determine the final desired position and orientation of the fixture. Position the mounting plate over the electrical leads on the ceiling in a way that the central opening in the plate and leads are aligned. The mounting plate installs directly to the pre-drilled holes with inserted anchors. Fasteners/anchors (not provided) that are appropriate to the ceiling material being fastened to and in adequate number to support the approximate 14 kg weight of the fixture must be installed using some or all the holes (Figure 4).
- 5. Fully thread each of the provided four nylon all-thread rods into each of the four threaded stand-offs on the mounting plate and slide the canopy up and over the rods such that each rod passes through the appropriate hole in the canopy. One at a time, slide a nylon washer up over each rod and thread on a wing nut so that the canopy can rest on the four washers. Level the canopy (Figure 5).
- 6. Pass each fabric-wrapped cord carefully through the strain relief at the end of each arm. Each cord is marked with tape at the position where it should be tightened. Gently tighten each set screw, just enough to support the pendant do not overtighten or damage the electrical cord and insulation (Figure 6).


- 7. Pass the fabric-wrapped electrical cords through the corresponding holes in the canopy (see the drawing on the last page). Slide plastic strain reliefs over the ends of cords. Adjust the slack in the cords to achieve desired visual composition (see the drawings on the last page). Fix the length of cords by tightening the set screws do not overtighten or damage the electrical cords and insulation (Figure 7).
- 8. With the fixture composition in place, and while the fixture is still supported on the nylon all-thread rods, connect the exposed leads of the fixture to the exposed leads on the ceiling following the wiring diagram and using the provided wire connectors. Attach the ground (TE) wires to ground (TE) wires of the light fixture, phase 1 (L1) to phase 1 (L1) of the light fixture, neutral (N) to neutral (N) of the light fixture (Figure 8). Please note the number and type of wire connectors may vary.
- 9. Raise the canopy and carefully supported fixture up the nylon all-thread rods all the way flush to the ceiling, taking care that no electrical cables or connections are exposed where the canopy meets the ceiling. Working one at a time, remove a nylon all-thread rod and insert one of the provided machine screws through the countersunk hole in the canopy into the corresponding threaded stand-off on the mounting plate above (Figure 9). Take great care when installing screws so that tools do not slip and scratch the canopy finish, or damage the exposed screw head slots.
- 10. Unwrap the protective packaging from each of the 8 individual pendants. Install the supplied LED light bulbs (7W Max) into the sockets. This fixture uses G9 sockets and light bulbs. The G9 is a bi-pin socket. Light bulbs are to be inserted and removed by pushing the bulb straight into the socket, and by pulling it straight out. The bulb, when inserted, should have a tight fit. Do not force the bulb. If there is resistance, check to make sure nothing inside the socket is bent or obstructing the bulb. Always turn off the power to the fixture when changing the bulb(s). Unwrap and lay out all individual glass diffusers. Carefully thread a glass diffuser onto each socket (Figure 10). Thread on the glass diffusers just until they are visually tight – do not overtighten.



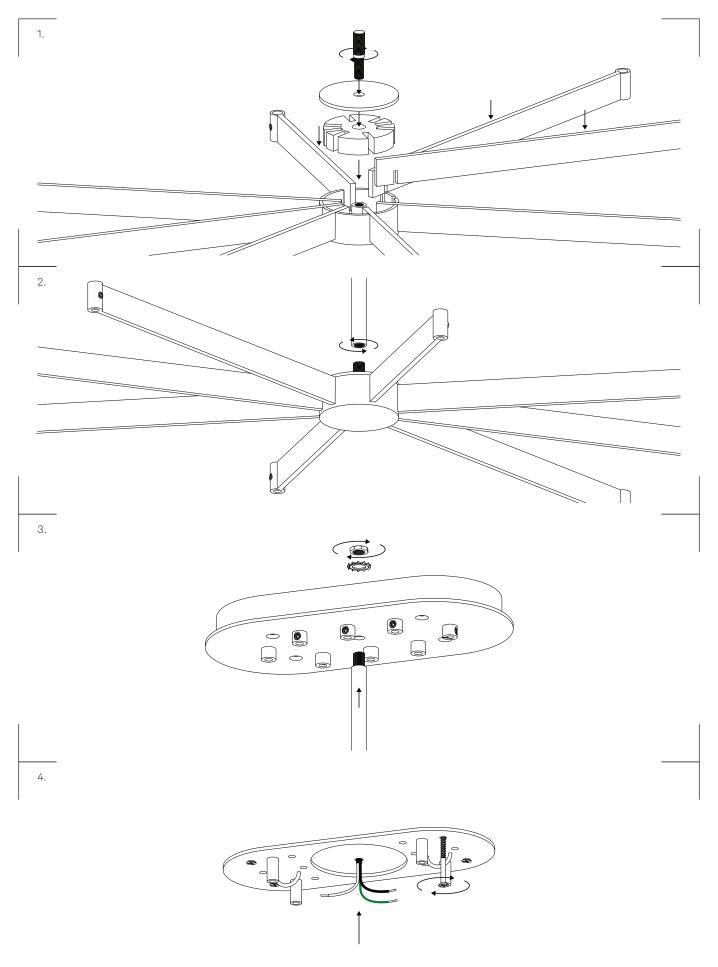





5.

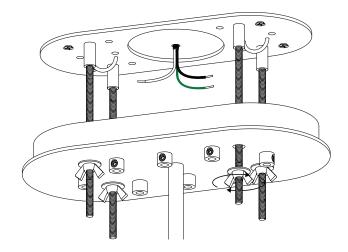


6.

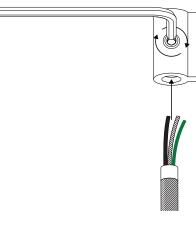


7.

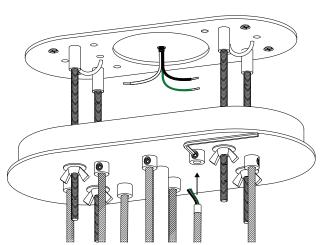


8.

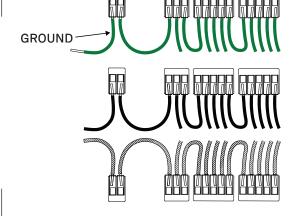

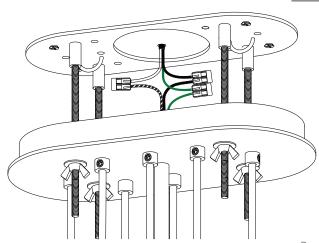




9.

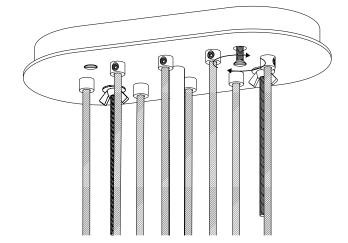

10.

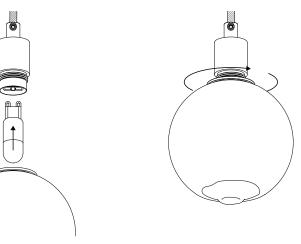

11.

