


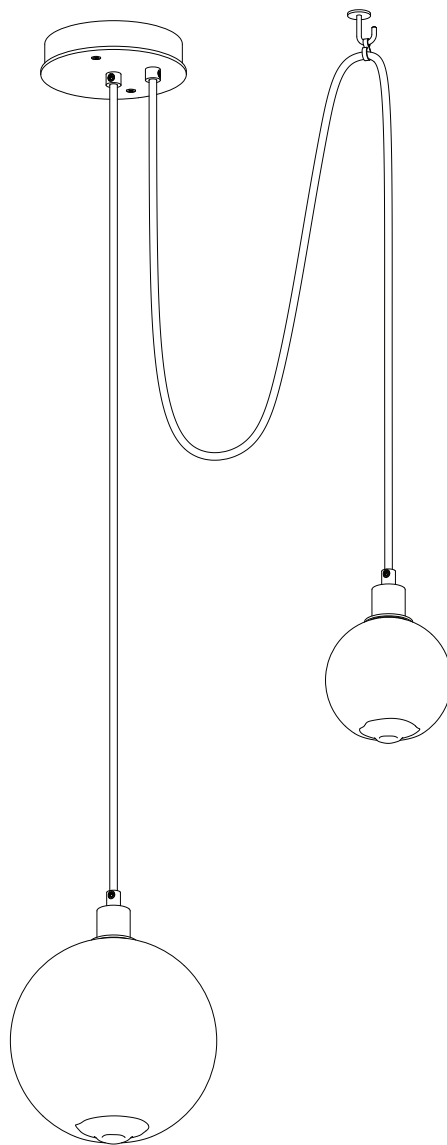

DRAPE COMPOSITION 1 PENDANT

Installation Instructions



SkLO

sklo.com


SkLO US 115 WEST NORTH STREET HEALDSBURG CALIFORNIA 95448 USA +1.707.385.2101 us@sklo.com
SkLO EU VÁŽNÍ 488 500 03 HRADEC KRÁLOVÉ CZECH REPUBLIC +420.495.542.071 eu@sklo.com




*Congratulations on your purchase of a SkLO
Drape Composition 1 Pendant. This product must
be installed in accordance with the applicable
codes by a person familiar with the construction
and operation of the product and the hazards
involved, preferably a licensed electrician.
Use a maximum 7W bulb.*

When unpacking individual items and parts of the light fixture, make sure to lay them out on a protective surface that will neither mar the delicate metal finishes nor scratch the glass. Gloves (nitrile) are provided and must be worn during installation to avoid fingerprints on the finish of the exposed metal parts.

Your SkLO fixture will arrive with the hand-blown glass elements packed separately from the light fixture itself.

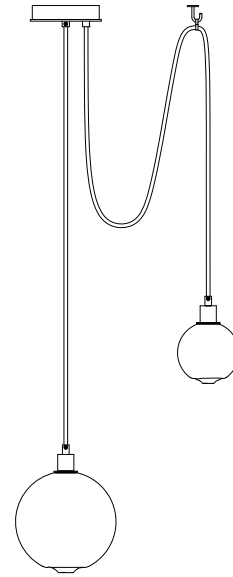

CONTENTS:

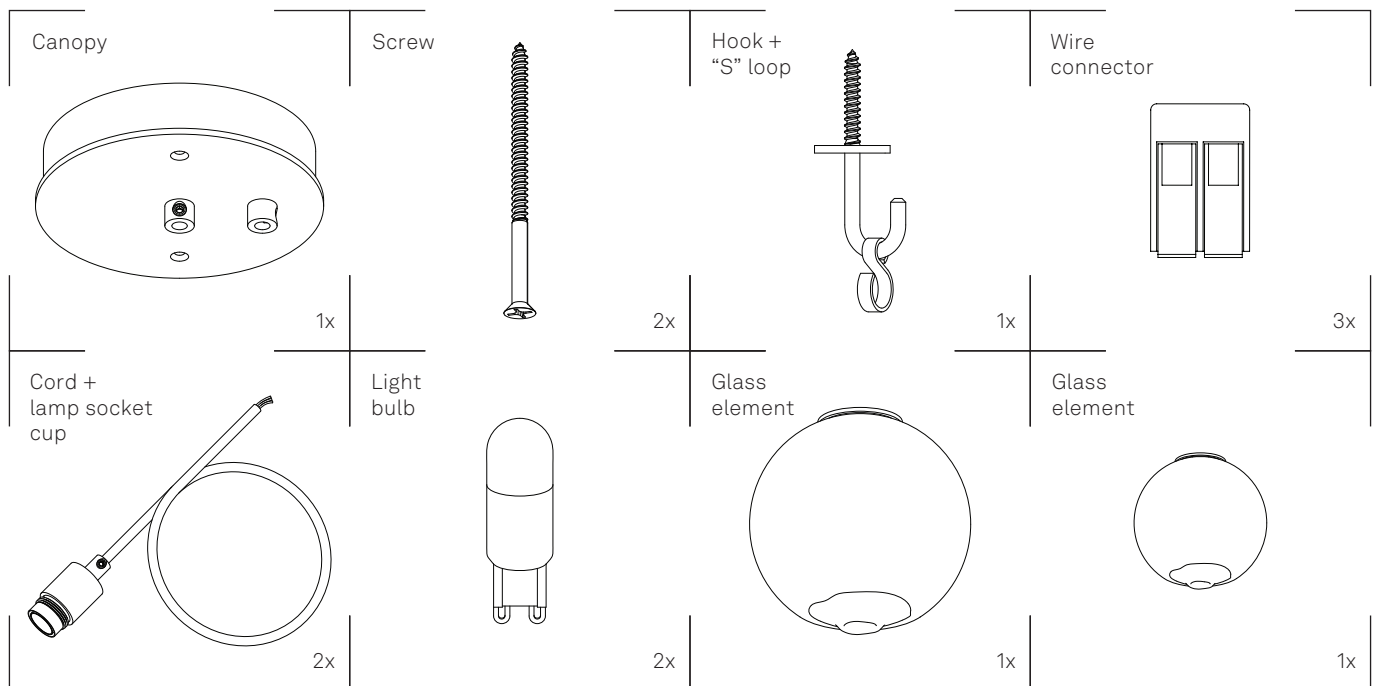



1. Uncoil and gently smooth the fabric-wrapped electrical cords of each pendant. Determine the desired length of each cord and trim each one, making sure to leave enough additional length to make the wiring connections within the canopy. When trimming the fabric-wrapped electrical cords make sure to use electrical tape or other means to secure the fabric at the location of the cut, and then at the cut end to avoid splaying, fraying, or slack in the fabric.


Slide the provided brass “S” loop onto the cord of the pendant which will be the off-set/ swagged pendant (Figure 1).

2. Pass the fabric-wrapped electrical cords through the strain reliefs in the canopy. Fix the length of cords by tightening the set screws – do not overtighten or damage the electrical cords and insulation (Figure 2).
3. Carefully supporting the fixture, connect the exposed leads of the fixture to the exposed leads on the ceiling following the wiring diagram and using the provided wire connectors. Attach the ground (TE) wires to ground (TE) wires of the light fixture, phase 1 (L1) to phase 1 (L1) of the light fixture, neutral (N) to neutral (N) of the light fixture (Figure 3). Please note the number and type of wire connectors may vary.
4. The canopy installs directly to the ceiling. Anchors or other accessories appropriate for both the provided fasteners and the ceiling material/structure and weight of the fixture may be required (not provided). Align the canopy and carefully raise the supported fixture all the way flush to the ceiling taking care that no electrical cables or connections are exposed where canopy meets the ceiling. Fasten the canopy to the ceiling by screwing the two provided screws through the countersunk holes in the canopy (Figure 4). Take great care when installing screws so that tools do not slip and scratch the canopy finish, or damage the exposed screw head slots.


5. Determine the composition for your Drape Composition 1 and install the brass hook for the smaller off-set pendant into the ceiling at the desired location. Use anchor (not provided) appropriate to the ceiling material. Carefully slide the brass loop along the fabric-wrapped electrical cord taking great care not to tear or mar the fabric. Use needlenose pliers with taped jaws to slightly crimp the loop to fix the loop slightly into place. Hang the cord on the hook by slipping the open loop over the end of the hook (Figure 5).
6. Unwrap the protective packaging from both pendants. Install the supplied LED light bulbs (7W Max) into the sockets (Figure 6). This fixture uses G9 sockets and light bulbs. The G9 is a bi-pin socket. Light bulbs are to be inserted and removed by pushing the bulb straight into the socket, and by pulling it straight out. The bulb, when inserted, should have a tight fit. Do not force the bulb. If there is resistance, check to make sure nothing inside the socket is bent or obstructing the bulb. Always turn off the power to the fixture when changing the bulb(s). Unwrap and lay out both glass diffusers.
7. Carefully thread a glass diffuser onto each socket. Install the large diameter glass sphere onto the central pendant, and the smaller diameter glass sphere onto the off-set/ swagged pendant. Thread on the glass diffusers just until they are visually tight – do not overtighten.




1.




2.

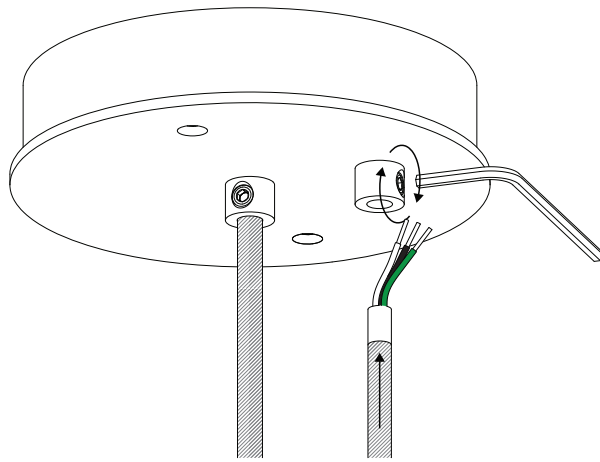

3.


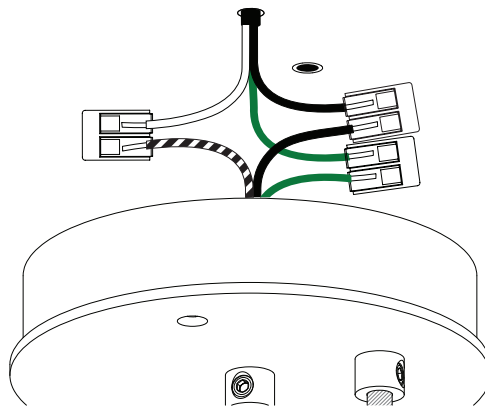


4.

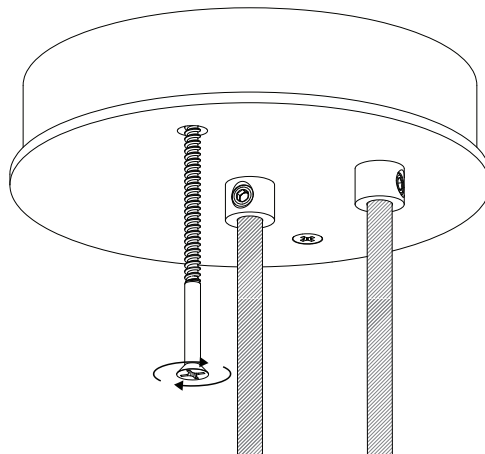



5.

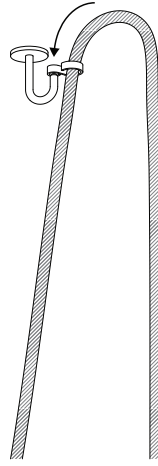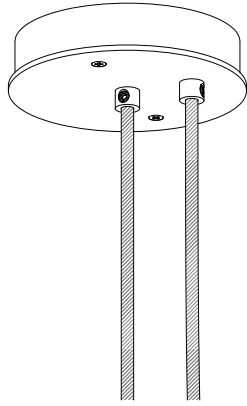

6.

