





## SKLO INSTALLATION INSTRUCTIONS: STEM PENDANT 2X LIGHT

GLOVES (NITRILE) ARE PROVIDED AND **MUST** BE WORN DURING INSTALLATION TO AVOID FINGERPRINTS ON THE FINISH OF THE EXPOSED METAL PARTS.

Congratulations on your purchase of a SkLO stem pendant 2X light. This product must be installed in accordance with the applicable codes by a person familiar with the construction and operation of the product and the hazards involved, preferably a licensed electrician. Use maximum 7W bulb.

- Carefully unpack all the individual parts and lay them out on a protective surface that will not mar the finishes or scratch the glass. Gloves (nitrile) are provided and must be worn during installation to avoid fingerprints on the finish of the exposed metal parts.
- The light fixture will come partially assembled. The glass elements will be packed separately from the light fixture itself. Unpack the metal light fixture first and leave the glass packed until the light is installed.
- Attach stem and canopy to fixture if they re not already assembled. Attach the female/internally threaded stem by threading the open end of the stem onto the exposed threaded nipple on the top of the light fixture. Then, connect the canopy by passing the threaded nipple at the other end of the stem through the center hole of the canopy and tightening the provided lock washer and nut(s) onto the nipple.
- Install the universal cross bar (provided) to the recessed electrical box with the provided 8/32 thread screws so that the 8/32 threaded holes spaced 2 3/4" on-center on the crossbar match the desired orientation of the fixture based on the countersunk holes in the canopy.
- Carefully supporting the fixture, connect the exposed leads on the fixture to the leads in the recessed electrical box according to the wiring diagram.
- The canopy installs directly to the crossbar. The back of the canopy is recessed to fit over the crossbar and sit flush against the wall finish surface. Fasten the canopy to the cross bar by screwing the two provided 1" long 8/32 thread machine screws directly into the 8/32 threaded holes space 2 3/4" on-center on the crossbar through the countersunk holes provided in the canopy, making sure that the canopy sits flush against the wall finish surface.
- Install the included light bulbs, or the light bulb of your choice (7W max) into the sockets.
- Carefully thread the glass spheres onto the sockets. Thread the glass spheres on just until they are visually tight - do not overtighten or the sockets can bind or the brass assembly on the glass sphere can loosen.

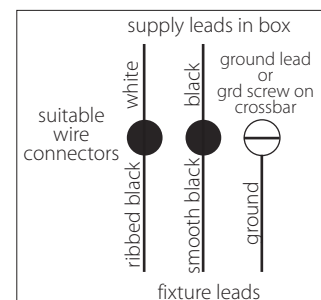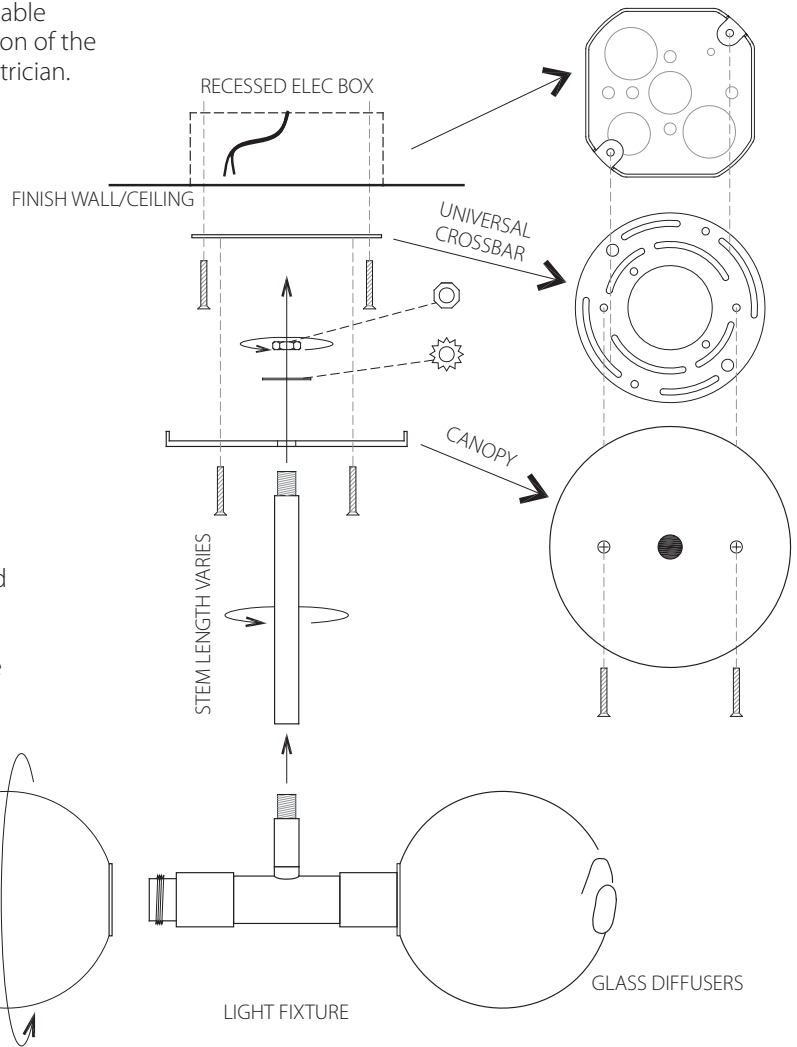

Wiring diagram



sklo.com

SkLO US 115 WEST NORTH STREET HEALDSBURG CALIFORNIA 95448 USA +1.707.385.2101 us@sklo.com  
SkLO EU VÁŽNÍ 488 500 03 HRADEC KRÁLOVÉ CZECH REPUBLIC +420.495.542.071 eu@sklo.com