




DRAPE PENDANT

Installation Instructions

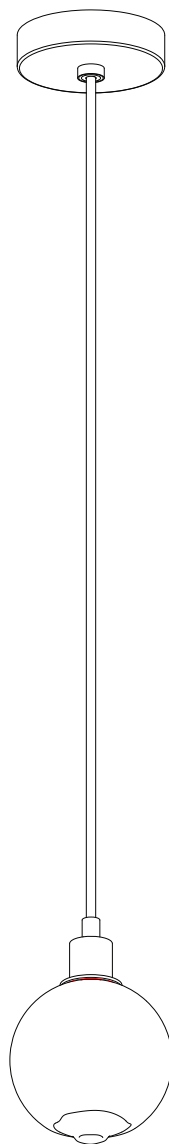

SkLO

sklo.com

SkLO US 115 WEST NORTH STREET HEALDSBURG CALIFORNIA 95448 USA +1.707.385.2101 us@sklo.com
SkLO EU BRATŘÍ ŠTEFANŮ 902/71 500 03 HRADEC KRÁLOVÉ CZECH REPUBLIC +420.495.542.071 eu@sklo.com




DRAPE PENDANT










Congratulations on your purchase of a SkLO Drape Pendant. This product must be installed in accordance with the applicable codes by a person familiar with the construction and operation of the product and the hazards involved, preferably a licensed electrician. Use a maximum 7W bulb.

When unpacking individual items and parts of the light fixture, make sure to lay them out on a protective surface that will neither mar the delicate metal finishes nor scratch the glass. Gloves (nitrile) are provided and must be worn during installation to avoid fingerprints on the finish of the exposed metal parts.

Your SkLO fixture will arrive with the hand-blown glass elements packed separately from the light fixture itself.



CONTENTS:

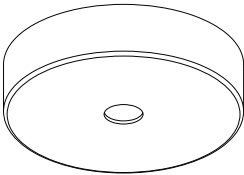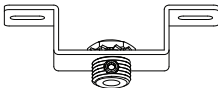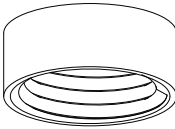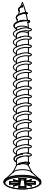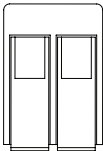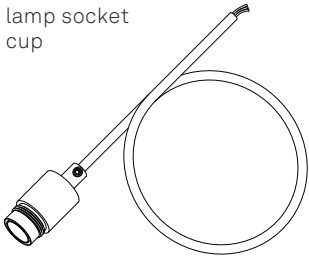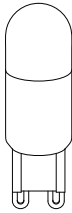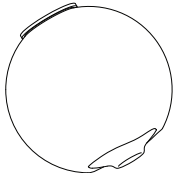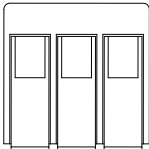Canopy	Mounting plate	Canopy nut	Screw	
				
	1x	1x	1x	2x
Wire connector	Cord + lamp socket cup	Light bulb	Glass element	
				
	2x	1x	1x	1x
Wire connector				
				
	1x			





1. The mounting plate installs directly to the pre-drilled holes with inserted anchors (not provided) that are appropriate to the ceiling material. Align the mounting plate so it sits flush against the ceiling. Taking care that no electrical cables or connections are exposed where the mounting plate meets the ceiling. Fasten the mounting plate to the ceiling by screwing the two provided screws through the holes provided in the mounting plate, making sure that the mounting plate sits flush against the ceiling finish surface (Figure 1). Take great care when installing screws so that tools do not slip and scratch the pendant finish.
2. Uncoil and gently straighten out the fabric-wrapped electrical cord. Determine the desired length of the cord and trim it, making sure to leave enough additional length to make the wiring connections inside the canopy. When trimming the fabric-wrapped electrical cord make sure to use electrical tape or other means to secure the fabric at the location of the cut, and then at the cut end to avoid splaying, fraying, or slack in the fabric (Figure 2).
3. Pass the fabric-wrapped electrical cord through the tooth lock washer, the canopy nut and the hole in the canopy (Figure 3).
4. Fix the length of the cord by tightening the set screw – do not overtighten or damage the electrical cord and insulation (Figure 4).
5. Carefully supporting the fixture, connect the exposed leads of the fixture to the exposed leads on the ceiling following the wiring diagram and using the provided wire connectors. Attach the ground (TE) wires to ground (TE) wires of the light fixture, phase 1 (L1) to phase 1 (L1) of the light fixture, neutral (N) to neutral (N) of the light fixture (Figure 5). Please note the number and type of wire connectors may vary.
6. Carefully slide the tooth lock washer and the canopy over the fabric electrical cord. Take care that no electrical cables or connection are exposed where the canopy meets the ceiling. Fasten the canopy by screwing the canopy nut onto mounting plate (2.5Nm for tooth washer up to M10 and 5Nm for tooth washer over M10) , making sure that the canopy sits flush against the ceiling finish surface (Figure 6). Take great care when installing canopy nut so that it does not slip and scratch the canopy finish.
7. Remove the protective packaging from the brass socket and install the supplied LED light bulb (7W Max) into the socket (Figure 5). This fixture uses G9 sockets and light bulbs. The G9 is a bi-pin socket. Light bulbs are to be inserted and removed by pushing the bulb straight into the socket, and by pulling it straight out. The bulb, when inserted, should have a tight fit. Do not force the bulb. If there is resistance, check to make sure nothing inside the socket is bent or obstructing the bulb. Always turn off the power to the fixture when changing the bulb(s). Carefully thread a glass diffuser onto the socket. Thread on the glass diffuser just until it is visually tight – do not overtighten.




1.



2.

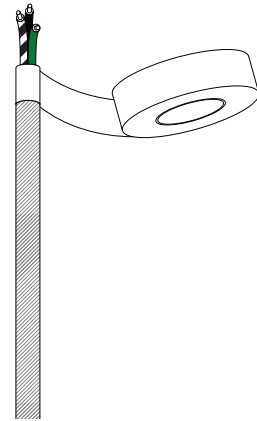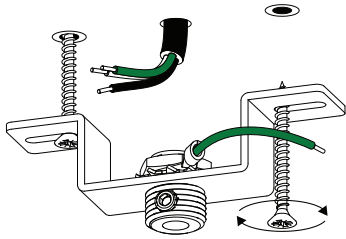


3.

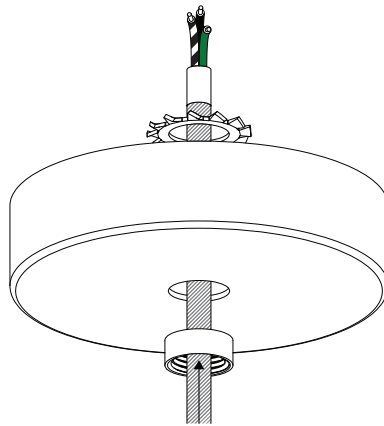

4.

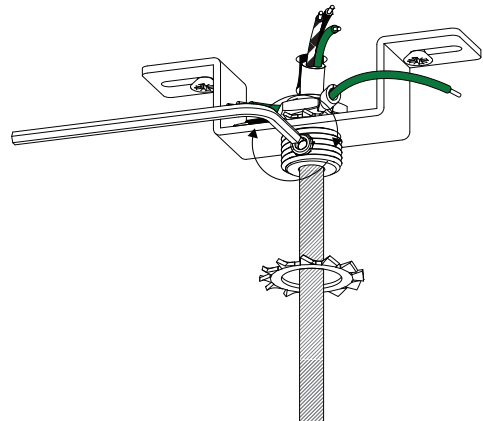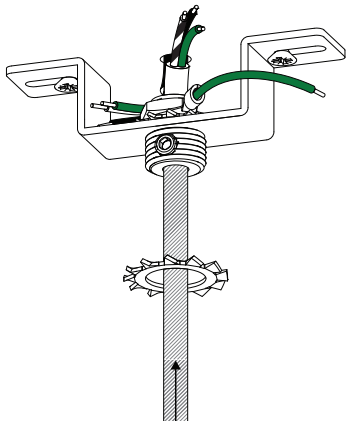


5.

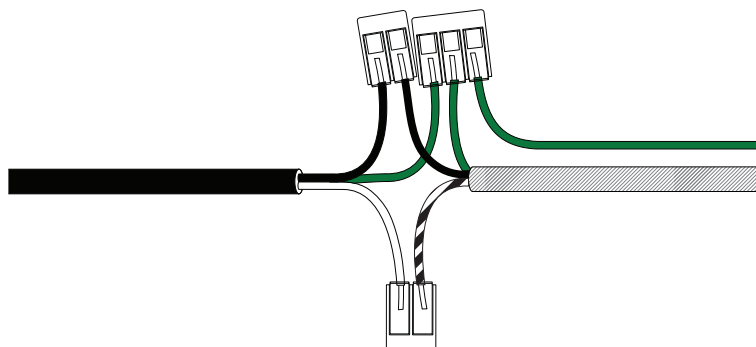



6.

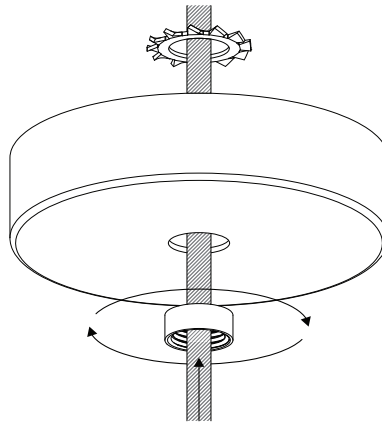

7.

