
BLOOM 1.0 PENDANT

Installation Instructions

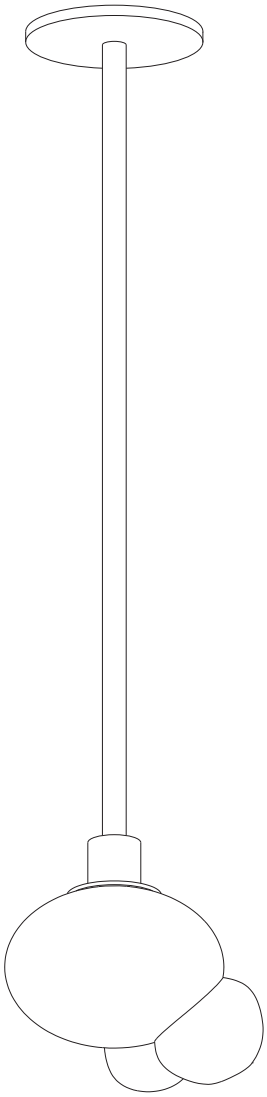


SkLO

sklo.com

BLOOM 1.0 PENDANT

Congratulations on your purchase of a SkLO Bloom 1.0 Pendant. This product must be installed in accordance with the applicable codes by a person familiar with the construction and operation of the product and the hazards involved, preferably a licensed electrician.
Use a maximum 7W bulb.

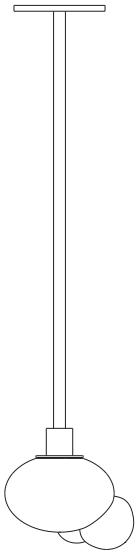


When unpacking individual items and parts of the light fixture, make sure to lay them out on a protective surface that will neither mar the delicate metal finishes nor scratch the glass. Gloves (nitrile) are provided and must be worn during installation to avoid fingerprints on the finish of the exposed metal parts.

Your SkLO fixture will arrive with the hand-blown glass elements packed separately from the light fixture itself.

CONTENTS:


Fixture weight (approximate): 4lbs/1.8kg (LT082), 4.2lbs/1.9kg (LT083), 4.2lbs/1.9kg (LT084)

Canopy

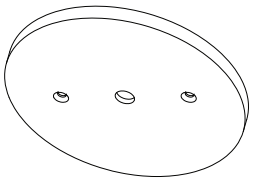

1x

Universal crossbar

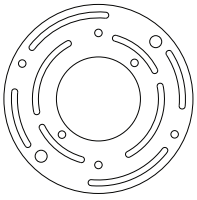


1x

Stem segment(s)




quantity varies

Diffuser

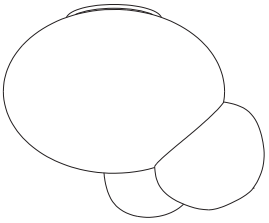


1x

Cable + lamp socket + cup

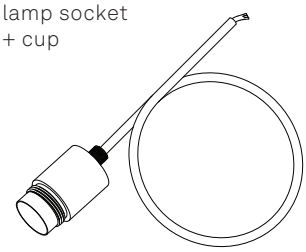

1x

Sachet with small components

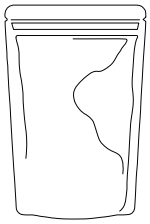

1x

** Shape of the diffuser differs based on customer's specification*
*** Number of stems may vary based on OAL*

1. Select stem sections from the provided stem kit to achieve desired overall length of fixture. Feed electrical wires from the top of the Light Fixture through the stem sections and thread the stems together using the provided threaded nipples. Then attach the stem to the top of the Light Fixture (Figure 1). Note: If custom cut-to-order stem(s) have been specified, use all provided stem(s) to achieve specified overall drop length (OAL).

2. Install a threaded nipple into the top of the stem. Feed the electrical wires and nipple through the central hole in the canopy. Slip the grounding wire lug over the nipple. Fasten the canopy to the stem using the lockwasher and nut, taking care to orient the exposed fastener locations on the canopy face in the desired position (Figure 2).

3. This fixture requires an electrical box and installs directly to the box using the provided universal crossbar. Fasten the universal crossbar to the electrical box. The canopy fastens to the crossbar by inserting the two machine screws (provided) through the countersunk holes in the face of the canopy and threading them into the 8/32 thread 2 3/4" on-center holes on the crossbar (Figure 3).

4. Make the electrical connections: Connect the fixture leads to the supply leads in the electrical box following the wiring diagram (Figure 4).

5. The pendant assembly is installed directly to the crossbar. The back of the canopy is recessed to fit over the crossbar and to sit flush against the ceiling finish surface. Take care that no electrical cables or connections are exposed where the canopy meets the ceiling. Fasten the canopy by screwing the two provided 1" long 8/32 thread machine screws directly into the 8/32 threaded holes spaced 2 3/4" on-center on the crossbar through the countersunk holes provided in the canopy, making sure that the canopy sits flush against the ceiling finish surface (Figure 5). Take great care when installing machine screws so that tools do not slip and scratch the canopy finish or damage the exposed screw head slots.

6. Install the supplied LED light bulb (7 W Max) into the sockets (Figure 6). This fixture uses G9 socket and light bulb. The G9 is a bi-pin socket. Light bulb is to be inserted and removed by pushing the bulb straight into the socket, and by pulling it straight out. The bulb, when inserted, should have a tight fit. Do not force the bulb. If there is resistance, check to make sure nothing inside the socket is bent or obstructing the bulb. Always turn off the power to the fixture when changing the bulb(s). Unwrap and lay out glass diffusers. Carefully thread a glass diffuser onto each socket (Figure 6). Thread on the glass diffusers just until they are visually tight – do not overtighten.

Figure 1

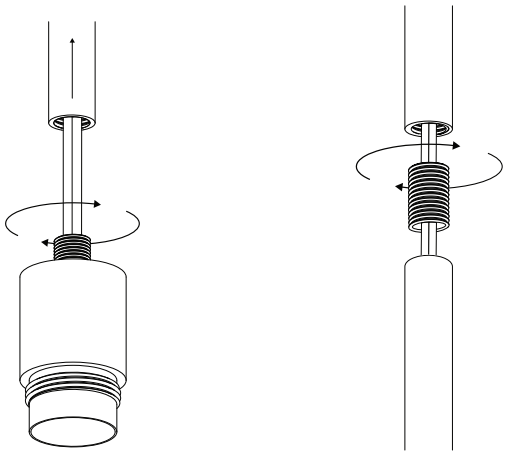


Figure 2

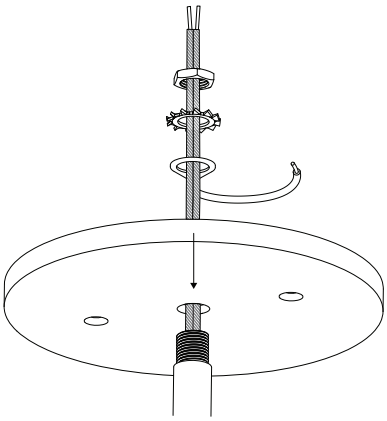


Figure 3

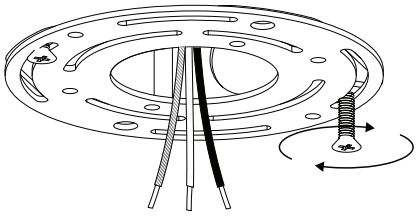


Figure 4

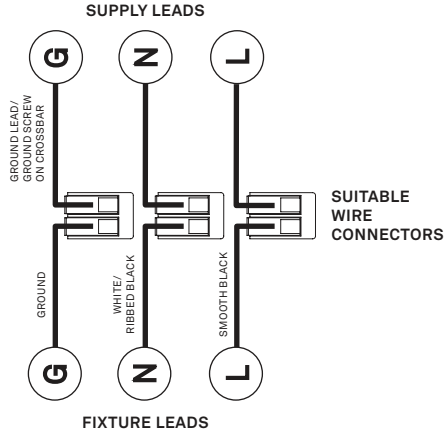


Figure 5


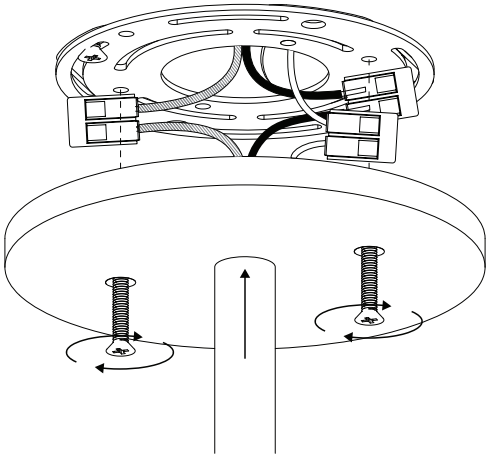


Figure 6

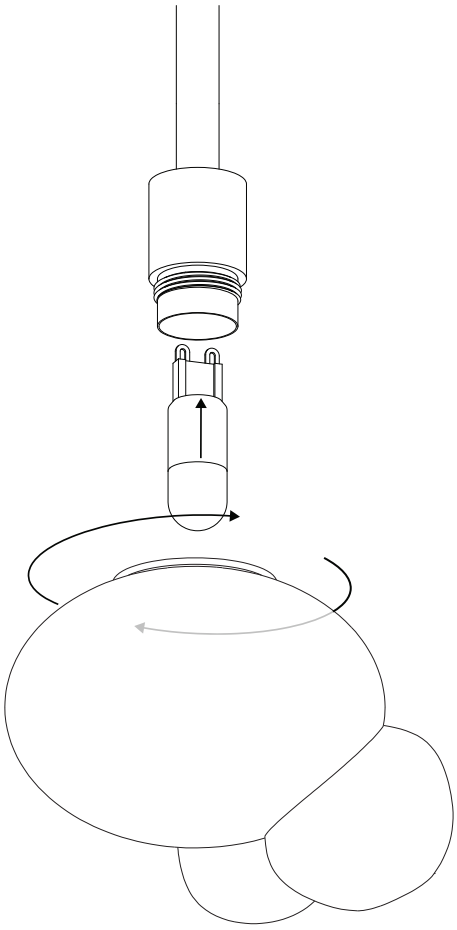

Sep 2026