


SkLO

Drape Arm Chandeliers Specification Guide

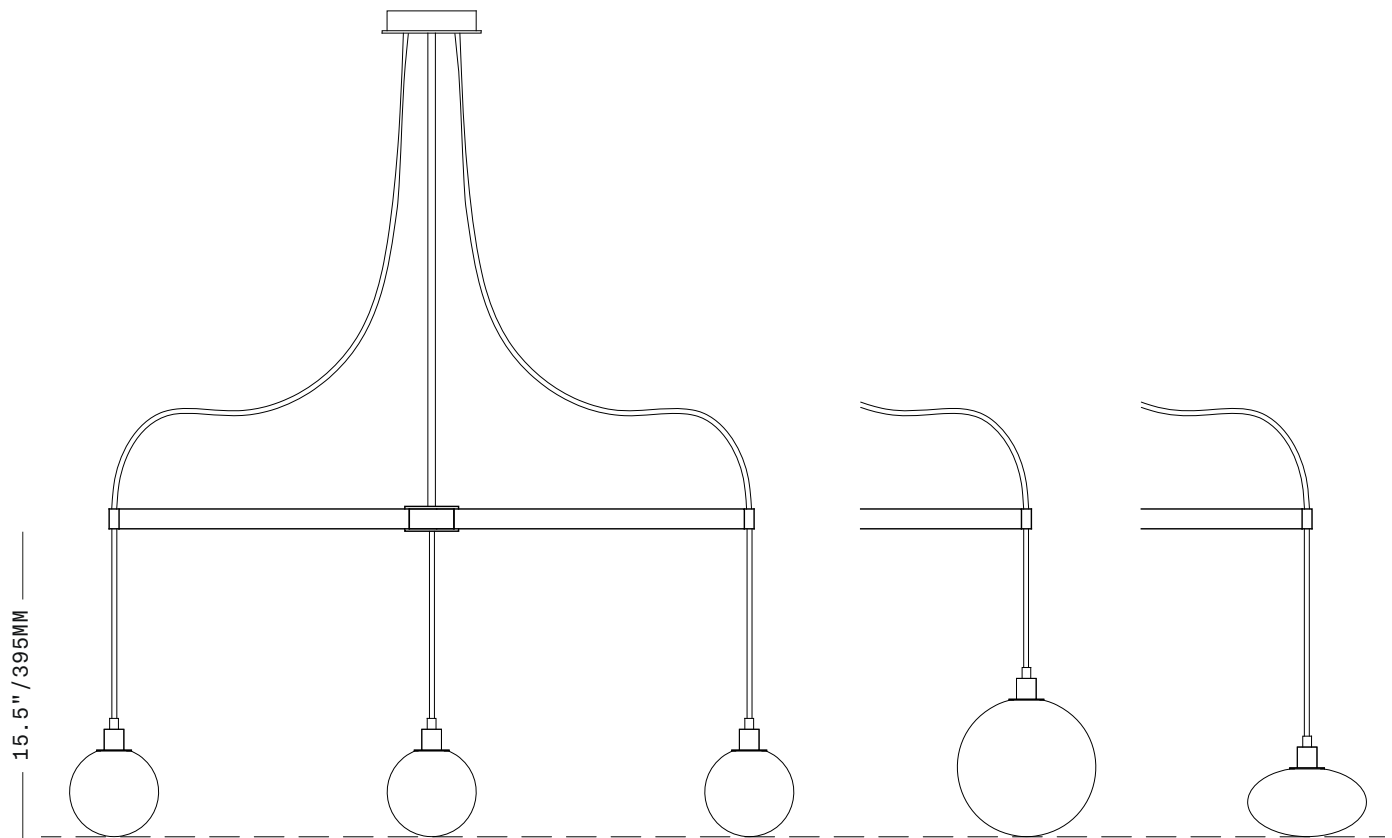

The Drape Arm Chandeliers are suspended on a rigid brass tube stem. The individual lit pendants of the chandeliers are suspended from the canopy on fabric-wrapped electrical cords. These cords pass through the ends of the arms, and the arms hold the cord in place so that the length of the pendants below the arms can be set.

For orders with Stem Kits, the Drape Arm Chandeliers are assembled with sufficient cord length to allow for installation of the "standard composition", based on the longest possible total stem length of your order, based on the type and number of Stem Kits ordered.

For orders with Cut-to-Order stems, SkLO will produce your chandelier with the rigid brass stem cut to a length that achieves the specified overall length. SkLO will automatically include cord lengths for each pendant that are long enough to achieve the standard composition and also drape gracefully from the arms to the canopy.

Note that in either case the cords are somewhat field adjustable. How much so depends on which stem option has been ordered. Orders using Stem Kits may have more or less extra cord that needs to be trimmed depending on the overall length of the fixture determined during installation. Orders with Cut-to-Order stems have only a small adjustment possible because the cord lengths have been provided at a length based on the custom stem length specified.

The "standard composition" is the one typically shown in the drawings and images seen on the SkLO website, specification sheets, and other materials. The drawing above shows a Drape Arm 3 Chandelier in the standard composition. The standard composition assumes a distance of 15.5" / 395mm from the bottom of the arms to the bottom of the glass diffusers regardless of diffuser size/shape.

Other compositions are entirely possible but must be specified at the time of order. For other compositions, SkLO will require both the length of the stem and the length of the cords for the pendants. Compositions other than the standard composition cannot be ordered via the SkLO website – specifications must be emailed to the SkLO client services at us@sklo.com.

